


User's manual

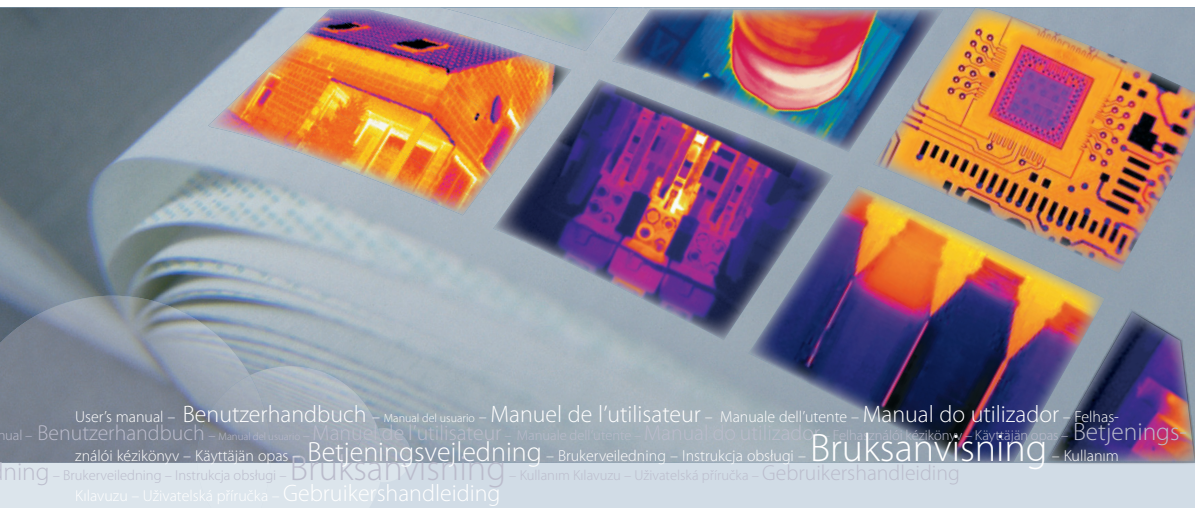

User's manual – Benutzerhandbuch – Manual del usuario – Manuel de l'utilisateur – Manuale dell'utente – Manual do utilizador – Felhasználói kézikönyv – Käyttöäjan opas – Betjeningsveiledning – Brukerveiledning – Instrukcja obsługi – Bruksanvisning – Kullanim Kilavuzu – Uživatelská příručka – Gebruikershandleiding

FLIR Reporter Professional

Professional Edition. Version 8.3

Publ. No.	1558567
Revision	a269
Language	English (EN)
Issue date	March 18, 2008

Notice to user	1
Customer help	2
Installation	3
About ThermoCAM™ Center	4
Searching for files	5
Creating a report	6
Screen elements & how to use them	7
Creating a custom report template	8
Creating Microsoft® Word document properties	9
Creating text comment files	10
Creating emissivity table files	11
Creating formulas	12
Converting radiometric sequence files	13
Software reference section	14
Supported file formats in the IR Viewer object	15

About FLIR Systems	16
Thermographic measurement techniques	17
History of infrared technology	18
Theory of thermography	19
The measurement formula	20
Emissivity tables	21
Glossary	22
Index	23

FLIR Reporter Professional

User's manual



Legal disclaimer

All products manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of one (1) year from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction.

All products not manufactured by FLIR Systems included in systems delivered by FLIR Systems to the original purchaser carry the warranty, if any, of the particular supplier only and FLIR Systems has no responsibility whatsoever for such products.

The warranty extends only to the original purchaser and is not transferable. It is not applicable to any product which has been subjected to misuse, neglect, accident or abnormal conditions of operation. Expendable parts are excluded from the warranty.

In the case of a defect in a product covered by this warranty the product must not be further used in order to prevent additional damage. The purchaser shall promptly report any defect to FLIR Systems or this warranty will not apply.

FLIR Systems will, at its option, repair or replace any such defective product free of charge if, upon inspection, it proves to be defective in material or workmanship and provided that it is returned to FLIR Systems within the said one-year period.

FLIR Systems has no other obligation or liability for defects than those set forth above.

No other warranty is expressed or implied. FLIR Systems specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

FLIR Systems shall not be liable for any direct, indirect, special, incidental or consequential loss or damage, whether based on contract, tort or any other legal theory.

Copyright

© FLIR Systems, 2008. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

This manual must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

Quality assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore we reserve the right to make changes and improvements on any of the products described in this manual without prior notice.

Patents

This product is protected by patents, design patents, patents pending, or design patents pending.

Table of contents

1	Notice to user	1
2	Customer help	3
3	Installation	5
3.1	System requirements	5
3.2	Installation of FLIR Reporter Professional	6
3.2.1	Windows® XP installation	6
3.2.2	Windows® Vista installation	7
3.2.3	Troubleshooting licensing problems	8
3.3	Removing FLIR Reporter Professional	9
4	About ThermoCAM™ Center	11
5	Searching for files	13
6	Creating a report	16
6.1	Creating a report using the Wizard	16
6.2	Creating a report using the QuickInsert menu command	21
6.3	Creating a report using the Rapid Report Manager	22
6.4	Creating a report from Windows® Explorer	23
7	Screen elements & how to use them	24
7.1	Toolbars & toolbar buttons	24
7.1.1	Main toolbar	24
7.1.2	IR Viewer object toolbar	26
7.1.3	IR Profile object toolbar	28
7.1.4	IR Histogram object toolbar	29
7.1.5	IR Trending object toolbar	30
7.2	Infrared objects	32
7.2.1	IR Viewer object	32
7.2.2	IR Profile object	35
7.2.3	IR Histogram object	36
7.2.4	IR Trending object	38
7.2.5	Digital Photo object	40
7.2.6	Result Table object	41
7.2.7	Field object	42
7.2.8	Summary Table object	43
8	Creating a custom report template	45
8.1	A note about working in the Microsoft® Word environment	45
8.2	Creating a custom infrared report template	46
8.2.1	About the front & back covers	47
8.2.2	Creating the infrared report template pages	48
8.2.2.1	Inserting IR Viewer objects and Digital Photo objects	49
8.2.2.2	Inserting IR Histogram objects	50
8.2.2.3	Inserting IR Profile objects	51
8.2.2.4	Inserting IR Trending objects	52
8.2.2.5	Inserting Result Table objects	53
8.2.2.6	Inserting Summary Table objects	54
8.2.2.7	Inserting Field objects	55

8.2.2.8	Connecting objects	56
8.2.2.9	Resizing infrared objects	57
8.2.2.10	Moving measurement tools	58
8.2.2.11	Selecting measurement tools	59
8.2.2.12	Moving between measurement tools	60
8.2.2.13	Cloning measurement tools	61
8.2.2.14	Deleting measurement tools	62
8.2.2.15	Deleting infrared objects	63
8.2.2.16	Deleting Result Table objects	64
8.2.2.17	Deleting Summary Table objects	65
8.2.2.18	Deleting Field objects	66
8.3	Creating a custom infrared report template based on an existing template	67
9	Creating Microsoft® Word document properties	68
9.1	Creating & editing Microsoft® Word document properties	68
9.2	Creating a Microsoft® Word field and linking the field to a document property	70
9.2.1	In Microsoft® Word XP	70
10	Creating text comment files	71
10.1	Creating a text comment file	71
10.2	Linking a text comment to a Result Table object	72
11	Creating emissivity table files	73
12	Creating formulas	75
12.1	Creating a simple formula	76
12.2	Creating a conditional formula using the if statement	78
13	Converting radiometric sequence files	81
14	Software reference section	83
14.1	FLIR Reporter Professional menu	84
14.2	Explanation of the QuickInsert dialog box	86
14.3	Shortcut menu for IR Viewer objects	87
14.3.1	Settings dialog box	89
14.3.1.1	Colors tab	89
14.3.1.2	Isotherms tab	90
14.3.1.3	Annotations tab	92
14.3.1.4	Object Parameters tab	93
14.3.1.5	Preferences tab	95
14.4	Shortcut menu for isotherms and IR scales	96
14.5	Shortcut menu for measurement tools	97
14.5.1	Settings dialog box	98
14.5.1.1	General tab	98
14.5.1.2	Object Parameters tab	99
14.5.1.3	Size/Position tab	100
14.6	Shortcut menu for IR Profile objects	101
14.6.1	Settings dialog box	102
14.6.1.1	General tab	102
14.6.1.2	Color tab	103
14.6.1.3	Lines tab	104
14.7	Shortcut menu for IR Histogram objects	105
14.7.1	Settings dialog box	106
14.7.1.1	General tab	106

14.7.1.2	Color tab	108
14.7.1.3	Lines tab	109
14.8	Shortcut menu for IR Trending objects	110
14.8.1	Settings dialog box	111
14.8.1.1	Connect tab	111
14.8.1.2	General tab	112
14.8.1.3	Prediction tab	113
14.8.1.4	Color tab	115
14.8.1.5	Line tab	116
14.9	Shortcut menu for Digital Photo objects	117
14.10	Shortcut menu for Result table objects	118
14.11	Shortcut menu for Field objects	119
14.12	Shortcut menu for Summary Table objects	120
15	Supported file formats in the IR Viewer object	121
16	About FLIR Systems	123
16.1	More than just an infrared camera	124
16.2	Sharing our knowledge	124
16.3	Supporting our customers	124
16.4	A few images from our facilities	125
17	Thermographic measurement techniques	127
17.1	Introduction	127
17.2	Emissivity	127
17.2.1	Finding the emissivity of a sample	128
17.2.1.1	Step 1: Determining reflected apparent temperature	128
17.2.1.2	Step 2: Determining the emissivity	130
17.3	Reflected apparent temperature	131
17.4	Distance	131
17.5	Relative humidity	131
17.6	Other parameters	131
18	History of infrared technology	133
19	Theory of thermography	137
19.1	Introduction	137
19.2	The electromagnetic spectrum	137
19.3	Blackbody radiation	138
19.3.1	Planck's law	139
19.3.2	Wien's displacement law	140
19.3.3	Stefan-Boltzmann's law	142
19.3.4	Non-blackbody emitters	143
19.4	Infrared semi-transparent materials	145
20	The measurement formula	147
21	Emissivity tables	153
21.1	References	153
21.2	Important note about the emissivity tables	153
21.3	Tables	153
22	Glossary	169
	Index	173

Typographical conventions

This manual uses the following typographical conventions:

- **Semibold** is used for menu names, menu commands and labels, and buttons in dialog boxes.
 - *Italic* is used for important information.
 - `Monospace` is used for code samples.
 - UPPER CASE is used for names on keys and buttons.
-

User-to-user forums

Exchange ideas, problems, and infrared solutions with fellow thermographers around the world in our user-to-user forums. To go to the forums, visit:

<http://www.infraredtraining.com/community/boards/>

PC software updates

FLIR Systems regularly issues PC software updates and service releases on the support pages of the company website:

<http://www.flirthermography.com>

To find the latest updates and service releases, make that sure you select **USA** in the **Select country** box in the top right corner of the page.

Training

To read about infrared training, visit:

<http://www.infraredtraining.com>

Additional license information

This software is sold under a single user license. This license permits the user to install and use the software on any compatible computer provided the software is used on only one computer at a time. One (1) back-up copy of the software may also be made for archive purposes.

INTENTIONALLY LEFT BLANK

2 Customer help

General

For customer help, visit:

<http://flir.custhelp.com>

To submit a question to the customer help team, you must be a registered user. It only takes a few minutes to register online. If you only want to search the knowledge-base for existing questions and answers, you do not need to be a registered user.

When you want to submit a question, make sure that you have the following information to hand:

- The camera model
- The camera serial number
- The communication protocol, or method, between the camera and your PC (for example, Ethernet, USB™, or FireWire™)
- Operating system on your PC
- Microsoft® Office version
- Full name, publication number, and revision number of the manual

On the customer help site you will also be able to download program updates for your camera.

Figure

This figure shows the welcome page of FLIR Systems customer help site:

10776203.a1



INTENTIONALLY LEFT BLANK

3 Installation

3.1 System requirements

Operating system

- Microsoft® Windows® Vista
 - Microsoft® Windows® XP Pro, with Service Pack 2 (SP2)
-

Hardware

Microsoft® Windows® XP:

- Personal computer with an Intel® 800 MHz Pentium processor, or an AMD Opteron, AMD Athlon 64, or AMD Athlon XP processor
- 512 MB of RAM, or greater
- 20 GB of available hard disk space
- CD-ROM or DVD-ROM drive
- Super VGA (1024 × 768) or higher-resolution monitor
- Internet access required for web updates
- Keyboard and Microsoft® mouse, or a compatible pointing device

Microsoft® Windows® Vista:

- Personal computer with a 1 GHz 32-bit (x86) processor
 - 1 GB of RAM, or greater
 - 40 GB hard disk, with at least 15 GB available hard disk space
 - DVD-ROM drive
 - Support for DirectX 9 graphics with:
 - WDDM Driver
 - 128 MB of graphics memory (minimum)
 - Pixel Shader 2.0 in hardware
 - 32 bits per pixel
 - Super VGA (1024 × 768) or higher-resolution monitor
 - Internet access (fees may apply)
 - Audio output
 - Keyboard and Microsoft® mouse, or a compatible pointing device
-

Software

- Microsoft® Office® 2003 with Service Pack 3 (SP3)
 - Microsoft® Office® 2007 with Service Pack 1 (SP1)
-

Related topics

For specific information about system requirements for the operating systems mentioned above, please visit: <http://www.microsoft.com/windows/>

3.2 Installation of FLIR Reporter Professional

3.2.1 Windows® XP installation

NOTE

- If your software license agreement depends on using a security device, insert the security device in an available USB connector of the computer before you enter the license number.
- The license number is printed on the back of the CD-ROM case.

Procedure

Follow this procedure to install FLIR Reporter Professional on your computer:

1	<p>Do one of the following:</p> <ul style="list-style-type: none"> ■ If a previous program version of FLIR Reporter Professional <i>is</i> installed on your computer, remove this version by using the Microsoft® Windows Add or Remove Programs procedure (Start → Settings → Add or Remove Programs). ■ If a previous program version of FLIR Reporter Professional is <i>not</i> installed on your computer, go to Step 2 below.
2	Close down all running programs, including Microsoft® Outlook.
3	<p>Insert the FLIR Reporter Professional CD-ROM into the CD-ROM drive on the computer. The installation should start automatically.</p> <p>Should the installation not start automatically, start Windows® Explorer and double-click SETUPEXE on the CD-ROM.</p>
4	Follow the on-screen instructions.

NOTE

- A Neevia docCreator will be added to your computer by this installation procedure.
- After installation, make sure the security level for macros in Microsoft® Word is not set to **Very high** (**Tools** → **Macros** → **Security**). If it is, set it to **High**.
- When opening a report, you will be asked whether to disable or enable the macros. Always click **Enable Macros**.

3.2.2 Windows® Vista installation

NOTE

- If your software license agreement depends on using a security device, insert the security device in an available USB connector of the computer before you enter the license number.
- The license number is printed on the back of the CD-ROM case.

Procedure

Follow this procedure to install FLIR Reporter Professional:

1	<p>Do one of the following:</p> <ul style="list-style-type: none"> ■ If a previous program version of FLIR Reporter Professional <i>is</i> installed on your computer, remove this version by using the Microsoft® Windows Add or Remove Programs procedure (Start → Settings → Add or Remove Programs). ■ If a previous program version of FLIR Reporter Professional is <i>not</i> installed on your computer, go to Step 2 below.
2	Close down all running programs, including Microsoft® Outlook.
3	<p>Insert the FLIR Reporter Professional CD-ROM into the CD-ROM drive on the computer. The installation should start automatically.</p> <p>Should the installation not start automatically, start Windows® Explorer and double-click SETUPEXE on the CD-ROM.</p>
4	In the Autoplay dialog box, click Run setup.exe (Published by FLIR Systems) .
5	In the User Account Control dialog box, confirm that you want to install FLIR Reporter Professional.
6	Follow the on-screen instructions.

NOTE

- A Neevia docCreator will be added to your computer by this installation procedure.
- After installation, make sure the security level for macros in Microsoft® Word is not set to **Very high** (**Tools** → **Macros** → **Security**). If it is, set it to **High**.
- When opening a report, you will be asked whether to disable or enable the macros. Always click **Enable Macros**.

3.2.3 Troubleshooting licensing problems

Procedure

Follow this procedure to troubleshoot licensing problems:

1	When installing programs on Microsoft® Windows® it is advisable to close other programs. This applies to FLIR Reporter Professional. Remember that Microsoft® Windows® Update and other automatic installation programs may be running in the background. Check that the Microsoft® Windows Update icon is not visible in the System Tray area of the Windows Task Bar (bottom right of your screen). Stop any other installation programs, or install FLIR Reporter Professional at a later time when other installation programs have finished.
2	Make sure that the license key you have entered corresponds to the current program version.
3	Make sure that the license key you have entered is correct. Note the difference between '1' (digit) and 'l' (letter), '0' (digit) and 'O' (letter), etc.
4	If you have purchased the FLIR Reporter Professional Security Device program, make sure that you insert the USB device before you click Next.
5	When you have verified Steps 1 to 4 above, click Next again. If the problem remains, please go to http://flir.custhelp.com to get support.

3.3

Removing FLIR Reporter Professional

Procedure

Follow this procedure to remove FLIR Reporter Professional from your computer:

1	Close down all applications.
2	Insert the FLIR Reporter Professional CD-ROM into the CD-ROM drive on the computer.
3	When the InstallShield Wizard dialog box is displayed, do the following: 1 Click Remove . 2 Click Next . 3 Follow the on-screen instructions.

NOTE

You can also remove FLIR Reporter Professional from your computer by using the Microsoft® Windows **Add or Remove Programs** procedure (**Start** → **Settings** → **Add or Remove Programs**).

INTENTIONALLY LEFT BLANK

General

When you install FLIR Reporter Professional, ThermaCAM™ Center will also be installed. ThermaCAM™ Center is a good starting point to begin working with infrared reports.

**Where do I find
ThermaCAM™
Center?**

You find ThermaCAM™ Center under **Programs** on the **Start** menu (**Start** → **Programs** → **FLIR Systems** → **ThermaCAM™ Center**).

**How to use
ThermaCAM™
Center**

In ThermaCAM™ Center, you can do one or more of the following:

- Automatically download program updates and news
 - Get access to the online help files for FLIR Reporter Professional
 - Find tutorials on how to create reports, report templates, edit text comment files, and more
 - Find system information about your computer
-

INTENTIONALLY LEFT BLANK

General

After you have installed FLIR Reporter Professional, a task pane will be displayed to the right in Microsoft® Word. At the top of the task pane, you can search for infrared images, digital photos and a variety of other files on your hard disk drive. You can then move these files to your report or report template by using a drag-and-drop operation.

About search parameters

The search engine is an *exact match* search engine and accepts alphabetic characters (a–z, A–Z) and numerical characters (0–9). However, numerical characters will be treated as text.

When you enter a search string the search engine searches for this string in any location of a file. This means that a search string such as '25' can, for example, return the following results:

- IR_0025.jpg ('25' in the file name)
- An image file with a text comment containing '25'
- An image file with an image description containing '25'
- An image file with a spotmeter that has a measurement result of +25°C
- A Microsoft® Word document with a document property containing the expression '25'

About boolean operators

You can combine search strings using boolean operators. Example:

- To find an image file that contains both a text comment containing '10' and a spotmeter that has a measurement result of +25°C, use the AND boolean operator.
- To find all files that either contains a text comment containing '10' or a spotmeter that has a measurement result of +25°C, use the OR boolean operator.

However, you can not use boolean operators in the following two example cases:

- To search for IR_0025.jpg ('25' in the file name) and a spotmeter that has a measurement result of +25°C
- To search for IR_0025.jpg ('25' in the file name) or a spotmeter that has a measurement result of +25°C

Procedure

Follow this procedure to search for the files you have indexed:

1	In the task pane in Microsoft® Word, type a search string.
2	<p>To start the search, click Go.</p> <p>The search engine will now search through all indexed files on your computer and display thumbnail images in the result table. You can now move one or several files to the report or report template by using a drag-and-drop operation.</p>

NOTE

For Microsoft® Word documents, only the following information is indexed:

- Document properties
- File name

- Modified date

The task pane will not be displayed if you have one of the following Microsoft® Office versions:

- Microsoft® Office 2003 Standard
 - Microsoft® Office 2007
-

INTENTIONALLY LEFT BLANK

6 Creating a report

6.1 *Creating a report using the Wizard*

General Using the Wizard gives you opportunities to fine-tune and adjust your report before it is created.

In the Wizard you can select different report templates for different pages, move pages up and down, play back voice comments, read and edit text comments and Microsoft® Word document properties, and so on.

NOTE Before you create an infrared report, a report template (a Microsoft® Word *.dot file) must have been previously created. However, FLIR Reporter Professional ships with several different report templates, which you may find useful.

6

Different ways to start the Wizard

You can start the Wizard in three different ways:

- By going to the **Start** menu and selecting a task on the program menu (**Start** → **Programs** → **FLIR Systems** → **FLIR Reporter Professional**).
 - By going to the **Start** menu and selecting a task using ThermoCAM™ Center (**Start** → **Programs** → **FLIR Systems** → **ThermoCAM™ Center**).
 - By clicking the FLIR button on the main toolbar.
-


INTENTIONALLY LEFT BLANK

Procedure



Follow this procedure to create a report using the Wizard:

1	Start the Wizard.
---	-------------------

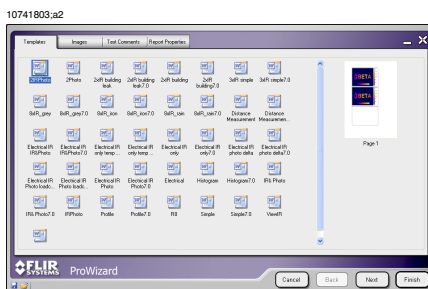- 2 On the **Templates** tab, select the report template that you want to use. A preview of each page in the report template will be displayed in the preview window.






3 On the **Images** tab, do one of the following:

- Click  and select the folder with the images that you want to include in your report.
- Click  to display a dialog box where you can search for images on your hard disk drive using creation date boolean operators, or in ThermoCAM™ Database 99 (if installed). For information about this program and about database queries, see the user's manual for ThermoCAM™ Database 99 (Publ. No. 1557403).

You can change the size of the thumbnail images by moving the slider at the bottom of the middle pane.

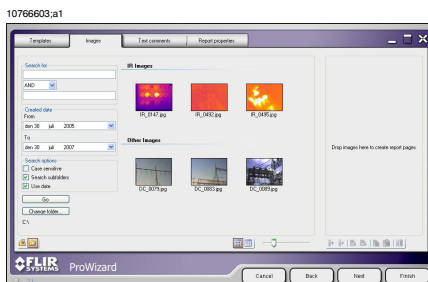

For more information about searching, see section 5 – Searching for files on page 13.

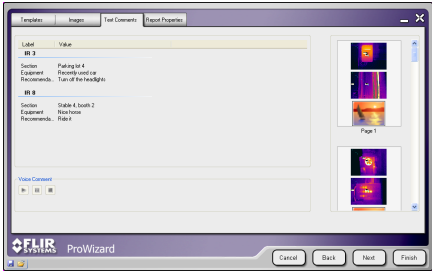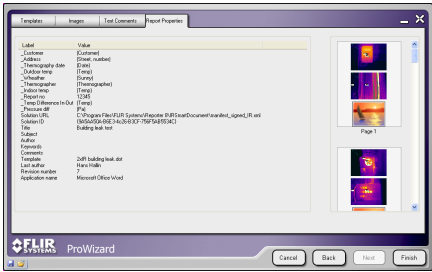

4	<p>Select the images you want to include in your report. To add them to your report, do one of the following:</p> <ul style="list-style-type: none"> ■ Move the images to the right pane using a drag-and-drop operation. ■ Add the image or images to the right pane by right-clicking an image and selecting Add All Images or Add Selected Images.
5	<p>To further modify your report, do one of the following:</p> <ul style="list-style-type: none"> ■ To change the order of pages, click Move page up or Move page down. ■ To delete pages, click Delete Page or Delete all pages. ■ To replace an image in the report, move another image to the location of the image you want to replace.
6	<p>On the Text Comments tab, do one or more of the following:</p> <ul style="list-style-type: none"> ■ For images with a text comment you can edit the text comment value by clicking it and then typing a new value. ■ For images with a voice comment you can play back the voice comment. <p>If a page contains more than one image with text comments or voice comments, you must select the image to be able to see the text comment or play back the voice comment.</p> <p>10742003.a2</p> 
7	<p>On the Report Properties tab you can edit values for report properties by clicking the value and then changing it or typing a new value.</p> <p>10742103.a2</p> 
8	<p>To create the report, click Finish.</p>

NOTE

If you are interrupted when you create the report, you can save the session and close the Wizard. You can then open the session again and continue where you were before you were interrupted.

You save and open a session by using the  button and the  button at the bottom left corner of the Wizard window.

Related topics

Section 8 – Creating a custom report template on page 45

6.2 *Creating a report using the QuickInsert menu command*

General

A fast and convenient way to create a report is to use the **QuickInsert** menu command. Using this command, you can select a pre-defined page layout, or choose to customize one of the page layout.

Using an existing page layout

Follow this procedure to use an existing page layout:

1	On the FLIR Reporter Professional menu, select QuickInsert . This will display a dialog box with thumbnails of pre-defined page layouts.
2	To create a report, double-click the page layout you want to use.
3	In your Microsoft® Word document, finish your report by opening infrared images and digital photos in the IR Viewer object and Digital Photo object.

Modifying a page layout

Follow this procedure to modify an existing page layout:

1	On the FLIR Reporter Professional menu, select QuickInsert . This will display a dialog box with thumbnails of pre-defined page layouts.
2	Select the page layout you want to modify.
3	Click Customize QuickInsert .
4	Make the necessary changes and save the page layout under a template name of your choice. The page will now be modified based on the previous settings.

Related topics

- Section 7 – Screen elements & how to use them on page 24
- Section 14.2 – Explanation of the QuickInsert dialog box on page 86

6.3 *Creating a report using the Rapid Report Manager*

General

Using the **Rapid Report Manager**, you can create one or several **Rapid Report Manager** icons on your Desktop, each having different settings and using different report templates.

When you drag-and-drop infrared or visual images to a **Rapid Report Manager** icon, the report is created in the background and will be displayed in Microsoft® Word.

NOTE

Before you create an infrared report, a report template (a Microsoft® Word *.dot file) must have been previously created. However, FLIR Reporter Professional ships with several different report templates, which you may find useful.

Valid file format

The valid file format for a **Rapid Report Manager** file is *.r8r.

Procedure

Follow this procedure to create a report using the **Rapid Report Manager**:

6

1	On the Start menu, click Rapid Report Manager (Start → FLIR Systems → FLIR Reporter Professional → Rapid Report Manager).
2	On the File menu, select Select Template .
3	To select an existing report template, browse your file system.
4	To save this Rapid Report Manager file to Desktop, click Save As on the File menu. Based on your requirements, you may want to create different Rapid Report Manager files corresponding to different report templates.
5	Close the Rapid Report Manager .
6	Move the infrared and visual images to the Rapid Report Manager icon by dragging the images from their environment, which can be the Desktop, a folder in Windows® Explorer or from an e-mail containing the images in Microsoft® Outlook.
7	The Rapid Report Manager will now create an infrared report according to your report template and the settings in this particular Rapid Report Manager file. A progress indicator will be displayed during creation.

Related topics

- Section 7 – Screen elements & how to use them on page 24
- Section 8 – Creating a custom report template on page 45

6.4 *Creating a report from Windows® Explorer*

General

You can create a report directly from Windows® Explorer.

Procedure

Follow this procedure to create a report directly Windows® Explorer:

1	Start Windows® Explorer.
2	Go to the folder or device containing your infrared or visual images.
3	Select one or several infrared images.
4	Right-click the images.
5	On the shortcut menu that is displayed, select Use this template when creating reports and click the report template you want to use. The report is now created in the background and will be displayed in Microsoft® Word.

Related topics

Section 8 – Creating a custom report template on page 45

7 Screen elements & how to use them

 
7.1 Toolbars & toolbar buttons

7.1.1 Main toolbar

NOTE







- If you do not see the main toolbar, select the toolbar on the **Toolbars** menu (**View** → **Toolbars** → **FLIR Reporter Professional**).
- You usually only insert infrared objects from the main toolbar when you design a custom report template from scratch, or when you modify an existing report template.












Figure



Explanation

This table gives an explanation to the figure above:

	Click to insert an IR Viewer object for infrared images and sequence file. An infrared image or sequence file contains valid temperature information that may be output by overlaying different kinds of measurement tools, such as spotmeters, profiles, areas, etc.
	Click to insert an IR Profile object. An IR Profile object contains a graph showing pixel values along a line in an infrared image.
	Click to insert an IR Histogram object. An IR Histogram object contains a graph illustrating how pixels in the image are distributed by graphing the number of pixels at each temperature level.
	Click to insert an IR Trending object. A trending object is a graphical representation of measurement values or text comment values on the Y-axis by infrared report pages or infrared images on the X-axis sorted by time, page number or text comment values. It can also display probable trends, according to different algorithms.
	Click to insert a Digital Photo object. This photo may be taken with a stand-alone digital camera, or with the digital visual camera featured on some FLIR Systems infrared cameras. Only use this method to insert a photo when you design a report template. In all other situations, insert photos by clicking Picture on the Insert menu (Insert → Picture → From File).
	Click to insert an Result Table object into your current document. A Result Table object displays the results of the measurement tools laid out in the infrared image, as well as other information that is related to the infrared image.

	Click to insert an Field object into your current document. A Field object can be linked to values or texts in your infrared image.
	Click to insert an Summary Table object. A Summary Table object lists infrared data of your choice from all infrared images in the report, one row per image.
	Click this toolbar button and then click an infrared object to remove the infrared object from your report.
	Click to connect infrared objects to each other—for example, an IR Profile object to an IR Viewer object.
	Click to create a report using the QuickInsert function. For more information about this function, see the following: <ul style="list-style-type: none"> ■ Section 6.2 – Creating a report using the QuickInsert menu command on page 21 ■ Section 14.2 – Explanation of the QuickInsert dialog box on page 86
	Click to duplicate the current page and insert the duplicate page after the current page.
	Click to delete the current page.
	Click to enter the design mode of Microsoft® Word. Use this mode when creating report templates and when you want to select and move objects.
	Click to create an Adobe® PDF document of the Microsoft® Word document. A free version of Adobe® Reader is available from http://adobe.com/products/acrobat/readstep2.html .
	Click to display the task pane.
	Click to display online help.

 
7.1.2 IR Viewer object toolbar

General

This toolbar is only displayed when an IR Viewer object is selected.


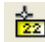





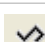


Figure




10733903.a2



Explanation

This table gives an explanation to the figure above:

	Click to display the selection tool, which works similar to other selection tools in word processing and desktop publishing programs. You use the selection tool to select measurement tools.
	Click to display a spotmeter with an attached flag that you can use to identify temperature values by moving it over the infrared image. If you click the image, the flying spotmeter tool will create a fixed spotmeter on the image. To stop the flying spotmeter mode, press ESC.
	Click to create fixed spotmeters on infrared images. The measurement result can then be displayed in a Result Table object.
	Click to create areas on infrared images. The measurement result can then be displayed in a Result Table object.
	Click to create ellipsoidal areas on infrared images. The measurement result can then be displayed in a Result Table object.
	Click to create polygon areas on infrared images. The measurement result can then be displayed in a Result Table object.
	Click to create a line on infrared images. The measurement result can then be displayed in an IR Profile object.
	Click to create a bent line on infrared images. The measurement result can then be displayed in an IR Profile object.
	Click to calculate the difference between two temperatures—for example, two spotmeters, or a spotmeter and the maximum temperature in the image. The result from the calculation will be displayed both as a ToolTip, and as a result in the result table. Using this toolbar button requires that you have laid out at least one measurement function on your image.
	Click to create a marker that you can move anywhere in an image and point to an area of interest.

	<p>Click to display a menu where you can do one of the following:</p> <ul style="list-style-type: none"> ■ Insert an isotherm between two temperature levels. This assigns a color to all temperatures between two temperature levels in an image with one preset color. ■ Insert an isotherm above a temperature level. This assigns a color to all temperatures above a certain temperature level in an image with one preset color. ■ Insert an isotherm below a temperature level. This assigns a color to all temperatures below a certain temperature level in an image with one preset color. ■ Set an isotherm color that is displayed when the camera detects an area where there may be a risk of humidity in the building structure (a humidity alarm). ■ Set an isotherm color that is displayed when the camera detects what may be an insulation deficiency in a wall (an insulation alarm). <p>For more information about alarms, see section 14.3.1.2 – Isotherms tab on page 90.</p>
	<p>Click to draw a rectangle around the area you want to zoom in on.</p> <p>When you are in zoom mode, a thumbnail image will appear in the top right corner, indicating the location of the area you have zoomed in to. You can move the area by clicking and holding down the left mouse button, then moving the mouse in any direction.</p> <p>To leave the zoom mode, either select 1× on the Zoom menu, or press the space bar on the keyboard.</p>
	<p>Click to fuse an infrared image with a digital photo. Fusing images can make it easier to identify the exact position of temperature anomalies.</p>

Related topics

- Section 8.2.2.1 – Inserting IR Viewer objects and Digital Photo objects on page 49
- Section 8.2.2.10 – Moving measurement tools on page 58
- Section 8.2.2.11 – Selecting measurement tools on page 59
- Section 8.2.2.12 – Moving between measurement tools on page 60
- Section 8.2.2.13 – Cloning measurement tools on page 61
- Section 8.2.2.14 – Deleting measurement tools on page 62
- Section 8.2.2.15 – Deleting infrared objects on page 63
- Section 14.3 – Shortcut menu for IR Viewer objects on page 87



7.1.3 IR Profile object toolbar

General This toolbar is only displayed when an IR Profile object is selected.

Figure 10734003.a1



Explanation This table gives an explanation to the figure above:

	Click to create a three-dimensional rendering of the graph of the IR Profile object.
	Click to turn on/turn off the grid lines in the graph of the IR Profile object.

 
- Related topics
- Section 8.2.2.3 – Inserting IR Profile objects on page 51
 - Section 8.2.2.9 – Resizing infrared objects on page 57
 - Section 8.2.2.15 – Deleting infrared objects on page 63
 - Section 14.6 – Shortcut menu for IR Profile objects on page 101

7.1.4 IR Histogram object toolbar

General






This toolbar is only displayed when an IR Histogram object is selected.

Figure



Explanation

This table gives an explanation to the figure above:

	Click to create a three-dimensional rendering of the graph of the IR Histogram object.
	Click to turn on/turn off colors in the graph of the IR Histogram object.
	Click to turn on/turn off the grid lines in the graph of the IR Histogram object.
	Click to use a <i>band</i> threshold in the IR Histogram object. A <i>band</i> threshold shows how many percent of the pixels are below a lower temperature, between this lower temperature and a higher temperature, and above that higher temperature. The percentages are displayed in the threshold legend below the IR Histogram object.
	Click to use a <i>step</i> threshold in the IR Histogram object. A <i>step</i> threshold shows how many percent of the pixels are below and above a specific temperature. The percentages are displayed in the IR Histogram object legend below the IR Histogram object.

Related topics

- Section 8.2.2.2 – Inserting IR Histogram objects on page 50
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.15 – Deleting infrared objects on page 63
- Section 14.7 – Shortcut menu for IR Histogram objects on page 105



7.1.5 IR Trending object toolbar

General This toolbar is only displayed when an IR Trending object is selected.

Figure 10734203.a1



Explanation This table gives an explanation to the figure above:

	Click to create a three-dimensional rendering of the graph of the IR Trending object.
	Click to turn on/turn off the grid lines in the graph of the IR Trending object.

- Related topics**
- Section 8.2.2.4 – Inserting IR Trending objects on page 52
 - Section 8.2.2.9 – Resizing infrared objects on page 57
 - Section 8.2.2.15 – Deleting infrared objects on page 63
 - Section 14.8 – Shortcut menu for IR Trending objects on page 110


INTENTIONALLY LEFT BLANK

7.2 Infrared objects

7.2.1 IR Viewer object

NOTE You usually only insert an IR Viewer object when designing a custom report template.

Inserting an IR Viewer object


To insert an IR Viewer object, click  on the main toolbar.

Displaying the toolbar

To display the toolbar for this object, select the object with the cursor.

An IR Viewer object with an infrared image

10758303.a2

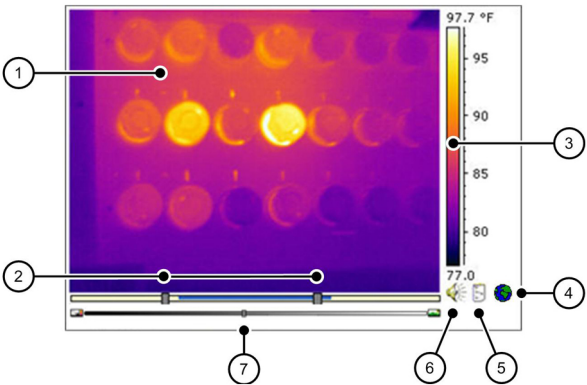


Callouts

This table gives information to the figure above:

1	Infrared image
2	Sliders to adjust level and span
3	Temperature scale
4	Indicator that the image file has embedded GPS data. Click the globe to display the position on a map.
5	Indicator that the image file has a text comment.
6	Indicator that the image file has a voice comment.
7	Slider to control image fusion. Drag the slider left or right to fuse an infrared image with a digital photo. For more information about image fusion, see section 14.3 – Shortcut menu for IR Viewer objects on page 87.

An IR Viewer object with a sequence file

10741703.a2

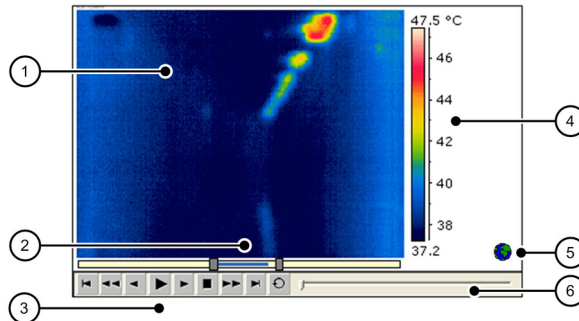

Callouts

This table gives information to the figure above:

1	Infrared sequence
2	Sliders to adjust scale limits
3	Control buttons to play back the sequence file
4	Temperature scale
5	Indicator that the image file has embedded GPS data. Click the globe to display the position on a map.
6	Progress indicator

7

Explanation

An IR Viewer object is a placeholder for infrared images and sequence files. An infrared image contains valid temperature information that may be output by overlaying different kinds of measurement tools, such as spotmeters, profiles, areas, etc.

Common tasks

Common tasks related to the IR Viewer object include the following:

- To change the scale limits, move the sliders left or right.
- To control image fusion, drag the slider left or right to fuse an infrared image with a digital photo. You can also use one of the following shortcuts to control image fusion:
 - To go to fully infrared image or fully digital photo, click the corresponding icon at the left or right end of the gauge.
 - To center the slider on the gauge, right-click the gauge.
 - To move the slider to a specific position on the gauge, double-click the gauge at that position.
 - To move the slider in small increments to the left or to the right, click the gauge to the left or to the right of the slider.

For more information about image fusion, see section 14.3 – Shortcut menu for IR Viewer objects on page 87.

- To auto-adjust an image for best image brightness and contrast, right-click one of the sliders.
- To move both sliders together, press and hold SHIFT and move one of the sliders.
- To open a new infrared image or sequence file, double-click the IR Viewer object. You can also right-click the IR Viewer object and select **Open**.
- To play back a voice comment, click the voice comment symbol. The voice comment symbol is only visible when the image has a voice comment.
- To see a text comment, click the text comment symbol. The text comment symbol is only visible when the image has a text comment.
- To display the position where the image was taken on a map, click the globe symbol. This requires that the image contains GPS data.
- To insert measurement tools, click the appropriate toolbar button.
- To save under a different file name, right-click the image and select **Save As**.
- To zoom in on an image, right-click the image and select **Zoom**.
- To change settings related to colors, isotherms, text comments, object parameters and preferences, right-click the image and select **Settings**.
- To rotate the image left or right, right-click the image and select **Rotate Left** or **Rotate Right**.
- To insert measurement tools using a menu instead of the toolbar buttons, right-click the image and select a measurement tool on the **Measurement** submenu.

-
- Section 7.1.2 – IR Viewer object toolbar on page 26
 - Section 8.2.2.1 – Inserting IR Viewer objects and Digital Photo objects on page 49
 - Section 8.2.2.9 – Resizing infrared objects on page 57
 - Section 8.2.2.15 – Deleting infrared objects on page 63
 - Section 14.3 – Shortcut menu for IR Viewer objects on page 87
-


7.2.2

IR Profile object

NOTE

You usually only insert an IR Profile object when designing a custom report template.


Inserting an IR Profile object

To insert an IR Profile object, click  on the main toolbar.

Displaying the toolbar

To display the toolbar for this object, select the object with the cursor.

Figure

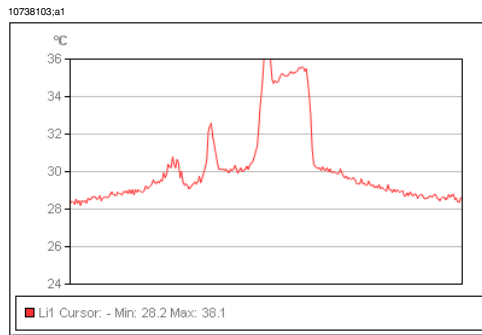

Explanation

An IR Profile object contains a graph showing pixel values along a line in an infrared image.

Common tasks

Common tasks related to the IR Profile object include the following:

- To create a three-dimensional rendering, click the appropriate toolbar button or right-click the IR Profile object and select **3D View**.
- To turn on/turn off the grid lines, click the appropriate toolbar button or right-click the IR Profile object and select **Grid Lines**.
- To turn on/turn off the legend, right-click the IR Profile object and select **Legend**.
- To swap X- and Y-axes, right-click the IR Profile object and select **Swap X & Y Axes**.
- To change settings related to general settings, color and lines, right-click the IR Profile object and select **Settings**.


Related topics

- Section 7.1.3 – IR Profile object toolbar on page 28
- Section 8.2.2.3 – Inserting IR Profile objects on page 51
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.15 – Deleting infrared objects on page 63
- Section 14.6 – Shortcut menu for IR Profile objects on page 101

7.2.3 IR Histogram object

NOTE You usually only insert an IR Histogram object when designing a custom report template.


Inserting an IR Histogram object

To insert an IR Histogram object, click  on the main toolbar.

Displaying the toolbar

To display the toolbar for this object, select the object with the cursor.

Figure

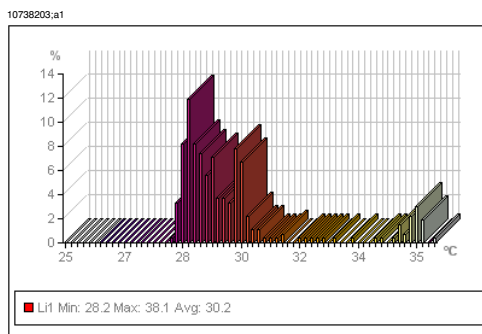

Explanation

An IR Histogram object contains a graph illustrating how pixels in the image are distributed by graphing the number of pixels at each temperature level.

Common tasks

Common tasks related to the IR Histogram object include the following:

- To turn on/turn off three-dimensional rendering, click the appropriate toolbar button or right-click the IR Histogram object and select **3D View**.
- To turn on/turn off color, click the appropriate toolbar button.
- To turn on/turn off the grid lines, click the appropriate toolbar button or right-click the IR Histogram object and select **Grid Lines**.
- To turn on/turn off the legend, right-click the IR Histogram object and select **Legend**.
- To swap X- and Y-axes, right-click the histogram and select **Swap X & Y Axes**.
- To change settings related to general settings, color and measurement objects, right-click the IR Histogram object and select **Settings**.

Related topics

- Section 7.1.4 – IR Histogram object toolbar on page 29
- Section 8.2.2.2 – Inserting IR Histogram objects on page 50
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.15 – Deleting infrared objects on page 63
- Section 14.7 – Shortcut menu for IR Histogram objects on page 105


INTENTIONALLY LEFT BLANK

7.2.4 IR Trending object

NOTE

You usually only insert an IR Trending object when designing a custom report template.


Inserting an IR Trending object

To insert an IR Trending object, click  on the main toolbar.

Displaying the toolbar

To display the toolbar for this object, select the object with the cursor.

Figure

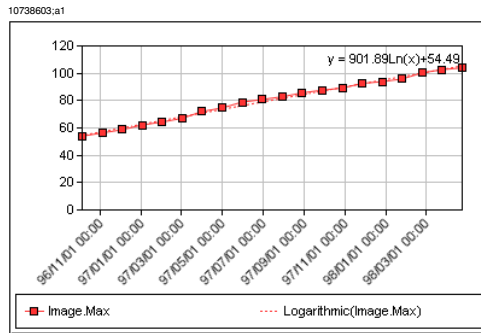

Explanation

A trending object is a graphical representation of measurement values or text comment values on the Y-axis by infrared report pages or infrared images on the X-axis sorted by time, page number or text comment values.

It can also display probable trends, according to different algorithms.

Common tasks

Common tasks related to the IR Trending object include the following:

- To turn on/turn off three-dimensional rendering, click the appropriate toolbar button or right-click the IR Trending object and select **3D View**.
- To turn on/turn off color, click the appropriate toolbar button.
- To turn on/turn off the grid lines, click the appropriate toolbar button or right-click the IR Trending object and select **Grid Lines**.
- To show/hide inactive trends, right-click the IR Trending object and select **Show Only Visible Plot Lines in Legend**.
- To turn on/turn off the legend, right-click the IR Trending object and select **Legend**.
- To swap X- and Y-axes, right-click the IR Trending object and select **Swap X & Y Axes**.
- To change settings related to connections, general settings, prediction, color and lines, right-click the IR Trending object and select **Settings**.
- To refresh the trending graph, right-click the IR Trending object and select **Refresh**.


Related topics

- Section 7.1.5 – IR Trending object toolbar on page 30
- Section 8.2.2.4 – Inserting IR Trending objects on page 52
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.15 – Deleting infrared objects on page 63
- Section 14.8 – Shortcut menu for IR Trending objects on page 110

7.2.5 Digital Photo object


NOTE Only use this method to insert a photo when designing a report template. In all other situations, insert photos by clicking **Picture** on the **Insert** menu (**Insert** → **Picture** → **From File**).

Inserting a Digital Photo object

To insert a Digital Photo object, click  on the main toolbar.

Figure

10738303.a1

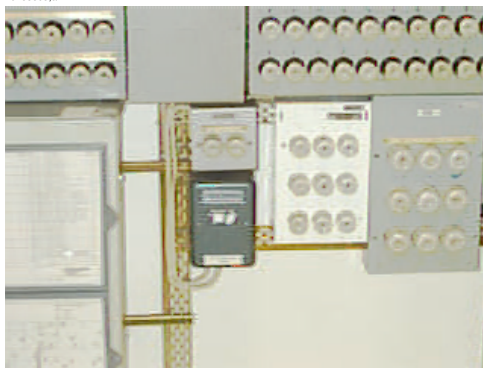

Explanation

The Digital Photo object is a placeholder for photos. This photo may be taken with a stand-alone digital camera, or with the digital visual camera featured on some FLIR Systems infrared cameras.

Common tasks

To open a new image, right-click the Digital Photo object and select **Open**.

Related topics


- Section 8.2.2.1 – Inserting IR Viewer objects and Digital Photo objects on page 49
 - Section 8.2.2.9 – Resizing infrared objects on page 57
 - Section 8.2.2.15 – Deleting infrared objects on page 63
 - Section 14.9 – Shortcut menu for Digital Photo objects on page 117
-

7.2.6 Result Table object

NOTE

- You usually only insert a Result Table object when designing a custom report template.
- You can edit the texts in the Result Table object, once the report is created. However, these changes will be deleted when you right-click the Result Table object and select **Refresh**.

Inserting a Result Table object

To insert an Result Table object, click  on the main toolbar.

Figure

10738403.a1

Title	IR_0147.jpg
Image MAX	39.2 °C
Image MIN	25.9 °C

Explanation

A Result Table object displays the results of the measurement tools laid out in the infrared image, as well as other information that is related to the infrared image.

Common tasks

Common tasks related to the Result table object include the following:

- To change borders and shading of the Result Table object, right-click the Result Table object and select **Borders and Shading**. This is a standard Microsoft® Word feature.
- To spell-check the texts in the Result Table object, right-click the Result Table object and select **Spelling**. This is a standard Microsoft® Word feature.
- To specify what information should be displayed in the Result Table object, right-click the Result Table object and select **Contents**.
- To refresh the Result Table object contents, right-click the Result Table object and select **Refresh**. You usually only have to do this if you have changed the contents manually.

Related topics

- Section 8.2.2.5 – Inserting Result Table objects on page 53
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.16 – Deleting Result Table objects on page 64
- Section 14.10 – Shortcut menu for Result table objects on page 118

7.2.7 Field object

NOTE You usually only insert a Field object when designing a custom report template.

Inserting a Field object

To insert an Field object, click  on the main toolbar.

Figure

10738503.a1
Sp1.Temperature 35.2 °C

Explanation A Field object can be linked to values or texts in your infrared image.

Common tasks

Common tasks related to the Field object include the following:

- To change borders and shading of the Field object, right-click the Field object and select **Borders and Shading**. This is a standard Microsoft® Word feature.
- To spell-check the texts in the Field object, right-click the Field object and select **Spelling**. This is a standard Microsoft® Word feature.
- To specify what information should be displayed in the Field object, right-click the Field object and select **Contents**.
- To refresh the Field object contents, right-click the Field object and select **Refresh**. You usually only have to do this if you have changed the contents manually.

Related topics


- Section 8.2.2.7 – Inserting Field objects on page 55
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.18 – Deleting Field objects on page 66
- Section 14.11 – Shortcut menu for Field objects on page 119

7.2.8 Summary Table object

NOTE

- You usually only insert an Summary Table object when designing a custom report template.
- You can edit the texts in the Summary Table object, once the report is created. However, these changes will be deleted when you right-click the Summary Table object and select **Refresh**.

Inserting a Summary Table object

To insert a Summary Table object, click  on the main toolbar.

Figure

10740403.a1

Image Date	Image Time	Sp1 Temperature
2002-04-17	09:46:35	23.2 °C
2002-04-17	12:05:55	24.6 °C

Explanation

A Summary Table object lists infrared data of your choice from all infrared images in the report, one row per image.

Common tasks

Common tasks related to the Summary Table object include the following:

- To change borders and shading of the Summary Table object, right-click the Summary Table object and select **Borders and Shading**. This is a standard Microsoft® Word feature.
- To spell-check the texts in the Summary Table object, right-click the Summary Table object and select **Spelling**. This is a standard Microsoft® Word feature.
- To specify what information should be displayed in the Summary Table object, right-click the Summary Table object and select **Contents**.
- To refresh the Summary Table object contents, right-click the Summary Table object and select **Refresh**. You usually only have to do this if you have changed the contents manually.

Related topics

- Section 8.2.2.6 – Inserting Summary Table objects on page 54
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.16 – Deleting Result Table objects on page 64
- Section 14.12 – Shortcut menu for Summary Table objects on page 120

INTENTIONALLY LEFT BLANK

8 Creating a custom report template

8.1 *A note about working in the Microsoft® Word environment*

General

Due to the fact that FLIR Reporter Professional is an add-in to Microsoft® Word, basically all existing features you usually use when creating a Microsoft® Word document template can be used when creating your report templates.

FLIR Reporter Professional adds a number of commands that are specific to the industry of infrared imaging and reporting, and these commands can be accessed on the FLIR Reporter Professional menu as well as on the different toolbars.

You use these features, along with the usual Microsoft® Word features, when you create infrared report templates.

NOTE

- Creating a report template requires skill in creating document templates in Microsoft® Word. For more information about this, please refer to your Microsoft® Word documentation, or the Microsoft® Word online help.
 - When creating a custom report template, you may find it useful to select **Show/Hide ¶** on the main toolbar in Microsoft® Word.
-

8.2 *Creating a custom infrared report template*

Typical structure of a report template

A custom infrared report template usually consists of the following types of pages:

- A front cover
 - A number of different pages, containing combinations of IR Viewer objects, Digital Photo objects, IR Histogram objects, IR Profile objects, Result Table objects, Summary Table objects, etc.
 - A back cover
-

Few or many report templates?

It is not uncommon that you will use one specific template for one specific customer. If this is the case, you may want to include your customer's company-specific information in the template, rather than entering it manually after the infrared report has been generated.

Consequently, if several of your customers request an infrared report that could be met with one, or a few, single templates, company-specific information should probably not be included in the template, since that kind of information may easily be entered after the **Rapid Report Manager** or the Wizard has generated the report.

Related topics

- Section 8.2.1 – About the front & back covers on page 47
 - Section 8.2.2 – Creating the infrared report template pages on page 48
-

8.2.1 About the front & back covers

General You create the front and back covers of the report template using existing features in Microsoft® Word.

Types of information The front and back covers of an infrared report template typically include the following information:

- Your and your customer's company names
- Other contact information
- Current date
- Title of the infrared report
- Your and your customer's company logotypes
- Any additional artwork or information that you may want to include

8.2.2 Creating the infrared report template pages

General You create an infrared report page either by clicking the buttons on the FLIR Reporter Professional toolbar, or by clicking the commands on the FLIR Reporter Professional menu.

Types of infrared objects There are five different infrared objects and three table objects:

- IR Viewer object
- Digital Photo object
- IR Histogram object
- IR Profile object
- IR Trending object
- Result table object
- Summary table object
- Field object

NOTE The procedures on the following pages assume that you click the toolbar buttons. However, you can also click the commands on the FLIR Reporter Professional menu.



Related topics

- Section 8.2.2.1 – Inserting IR Viewer objects and Digital Photo objects on page 49
- Section 8.2.2.2 – Inserting IR Histogram objects on page 50
- Section 8.2.2.3 – Inserting IR Profile objects on page 51
- Section 8.2.2.4 – Inserting IR Trending objects on page 52
- Section 8.2.2.5 – Inserting Result Table objects on page 53
- Section 8.2.2.6 – Inserting Summary Table objects on page 54
- Section 8.2.2.7 – Inserting Field objects on page 55
- Section 8.2.2.8 – Connecting objects on page 56
- Section 8.2.2.9 – Resizing infrared objects on page 57
- Section 8.2.2.10 – Moving measurement tools on page 58
- Section 8.2.2.11 – Selecting measurement tools on page 59
- Section 8.2.2.12 – Moving between measurement tools on page 60
- Section 8.2.2.13 – Cloning measurement tools on page 61
- Section 8.2.2.14 – Deleting measurement tools on page 62
- Section 8.2.2.15 – Deleting infrared objects on page 63
- Section 8.2.2.16 – Deleting Result Table objects on page 64
- Section 8.2.2.17 – Deleting Summary Table objects on page 65
- Section 8.2.2.18 – Deleting Field objects on page 66

8.2.2.1

Inserting IR Viewer objects and Digital Photo objects**Procedure**

Follow this procedure to insert IR Viewer objects and Digital Photo objects:

1	On your template page, place the cursor where you want the IR Viewer object or Digital Photo object to appear. The placeholders will be inserted <i>after and below</i> the cursor.
2	<p>On the toolbar, click  (for an IR Viewer object) or  (for a Digital Photo object). An placeholder will now appear on the page. Since you are creating a template, you should not open any infrared images or photos at this stage.</p> <p>When you create the report by using the Wizard or the Rapid Report Manager, the image placeholder will automatically load infrared and/or visual images.</p>


Related topics

- Section 7.1.2 – IR Viewer object toolbar on page 26
- Section 7.2.1 – IR Viewer object on page 32
- Section 7.2.5 – Digital Photo object on page 40
- Section 14.3 – Shortcut menu for IR Viewer objects on page 87

8.2.2.2 *Inserting IR Histogram objects*

Procedure

Follow this procedure to insert an IR Histogram object:

1	On your template page, click where you want the IR Histogram object to appear. The IR Histogram object will be inserted <i>after and below</i> the cursor.
2	<div>On the toolbar, click . An empty IR Histogram object will now appear on your page.</div> <div>When you create your report, the IR Histogram object will illustrate how pixels in the area tools of the image are distributed by graphing the number of pixels at each temperature level.</div>


Related topics

- Section 14.7 – Shortcut menu for IR Histogram objects on page 105
- Section 7.1.4 – IR Histogram object toolbar on page 29
- Section 7.2.3 – IR Histogram object on page 36

8.2.2.3 Inserting IR Profile objects

Procedure

Follow this procedure to insert an IR Profile object:

1	On your template page, click where you want the IR Profile object to appear. The IR Profile object will be inserted <i>after and below</i> the cursor.
2	<p>On the toolbar, click . An empty IR Profile object will now appear on your page.</p> <p>When you create your report, the IR Profile object will automatically display the values of any line tools that are saved in the infrared image.</p>

Related topics

- Section 7.1.3 – IR Profile object toolbar on page 28
- Section 7.2.2 – IR Profile object on page 35
- Section 14.6 – Shortcut menu for IR Profile objects on page 101


8.2.2.4 Inserting IR Trending objects

General

The default behavior of the IR Trending object is that it automatically displays a trend for all IR Viewer objects in the report, once the report is created. You can also manually move images to the IR Trending object using a drag-and-drop operation.

Procedure

Follow this procedure to insert an IR Trending object:

1	On your template page, click where you want the IR Trending object to appear. The IR Trending object will be inserted <i>after and below</i> the cursor.
2	On the toolbar, click  . This will display a dialog box for IR Trending objects.
3	On the Connect tab, do the following: <ol style="list-style-type: none"> 1 Specify a parameter for the Y-axis. To do this click Add and select a label and value in the left and right pane, respectively. 2 Specify a parameter for the X-axis. <ul style="list-style-type: none"> ■ Time ■ Image sequence number ■ Text Comment
4	On the General tab, do the following: <ol style="list-style-type: none"> 1 Under General, select options related to how the IR Trending object will be displayed. 2 Under Trend range, select which images should be included in the IR Trending object. 3 In the Threshold text box, enter a value that will display a horizontal baseline in the IR Trending object.
5	On the Prediction tab, do the following: <ol style="list-style-type: none"> 1 Under Forecast, select the number of periods forward and backward for which the algorithm will present a probable trend. 2 Under Trend Regression type, select the algorithm you want to use.
6	On the Color tab, select colors for various items in the IR Trending object.
7	On the Line tab, select colors and line types for the lines that will be displayed in the IR Trending object.
8	Click OK .


Related topics

- Section 14.8 – Shortcut menu for IR Trending objects on page 110
- Section 7.1.5 – IR Trending object toolbar on page 30
- Section 7.2.4 – IR Trending object on page 38

8.2.2.5 Inserting Result Table objects

Procedure

Follow this procedure to insert a Result Table object:

1	On your template page, click where you want the Result Table object to appear. The Result Table object will be inserted <i>after and below</i> the cursor.
2	On the toolbar, click  . A Result Table object will now appear on your page. When you create your report, the Result Table object will automatically display the values of any measurement tools in the infrared image.

NOTE


If a result table is connected to an infrared image and you delete either the table or the image, you will not be able to recreate the connection again.

Related topics

- Section 7.2.6 – Result Table object on page 41
- Section 14.10 – Shortcut menu for Result table objects on page 118

8.2.2.6 **Inserting Summary Table objects**

Procedure Follow this procedure to insert a Summary Table object:

1	On your template page, click where you want the Summary Table object to appear. The Summary Table object will be inserted <i>after and below</i> the cursor.
2	On the toolbar, click  .
3	Do the following: <div>1 In the left pane of the Columns area, select an object.</div> <div>2 In the right pane of the Columns area, select the values that you want to display in the Summary Table object.</div> <div>A structural preview of the Summary Table will be displayed in the Preview area.</div>
4	Click OK .


NOTE Contrary to a Result Table object, a Summary Table object is static. You update a Summary Table object by right-clicking it and selecting **Refresh**.

- Related topics**
- Section 14.12 – Shortcut menu for Summary Table objects on page 120
 - Section 7.2.8 – Summary Table object on page 43

8.2.2.7 Inserting Field objects

Procedure

Follow this procedure to insert a Field object:

1	On your template page, click where you want the field to appear. The Field object will be inserted <i>after and below</i> the cursor.
2	On the toolbar, click  . A dialog box will now appear.
3	Click the object you want to connect to the field.
4	Click OK.

NOTE

Field objects will not work if you insert them into a text box. Only Microsoft® Word fields work in text boxes. However, Field objects work properly in Microsoft® Word tables.

Related topics


- Section 14.11 – Shortcut menu for Field objects on page 119
- Section 7.2.7 – Field object on page 42

8.2.2.8 *Connecting objects*

NOTE

- This description assumes that you have one IR Viewer object and one IR Profile object on your template page.
 - The objects you connect must be on the same page when you connect them. If the document is repaginated and one of the objects falls on a different page the connection will, however, still be maintained.
-

Procedure

On the main toolbar, click . This will display a dialog box where you can select the IR Viewer object you want to connect the IR Profile object to.

8.2.2.9 *Resizing infrared objects*

Procedure

Follow this procedure to resize an infrared object:

1	Click anywhere on an IR Viewer object, a Digital Photo object, etc.
2	To change the size, drag one of the handles that will be displayed when you select the object.

NOTE

The procedure above does not apply to resizing Field Objects, Result Table objects and Summary Table objects. To resize these types of objects, select the object and use the menu commands on the **Table** menu.

Related topics

Section 7.2 – Infrared objects on page 32

8.2.2.10 Moving measurement tools

Procedure Follow this procedure to move a measurement tool:

1	Select one or several measurement tools according to section 8.2.2.11 – Selecting measurement tools on page 59.
2	Do one of the following: <ul style="list-style-type: none">■ To move the measurement tool, press the arrow keys.■ To move the measurement tool, use the mouse.


Related topics

- Section 7.1.2 – IR Viewer object toolbar on page 26
- Section 7.2.1 – IR Viewer object on page 32

8.2.2.11 *Selecting measurement tools*

Procedure

Do one of the following:

- To select one tool, click the tool.
 - To select several tools, SHIFT-click the tools.
 - To select all tools, select the IR Viewer object and press A.
 - To select one or several tools, click  and draw a rectangle around the tools you want to select.
-

Related topics

- Section 7.1.2 – IR Viewer object toolbar on page 26
 - Section 7.2.1 – IR Viewer object on page 32
-

8.2.2.12 *Moving between measurement tools*

Procedure

Do one of the following:

- To select one tool after another, in one direction, press TAB.
 - To select one tool after another, in the other direction, press and hold SHIFT and then press TAB.
-

Related topics

- Section 7.1.2 – IR Viewer object toolbar on page 26
 - Section 7.2.1 – IR Viewer object on page 32
-

8.2.2.13 *Cloning measurement tools*

Procedure To clone a measurement tool, press and hold CTRL when you move the measurement tool. This will create a clone of the measurement tool.

Related topics

- Section 7.1.2 – IR Viewer object toolbar on page 26
- Section 7.2.1 – IR Viewer object on page 32

8.2.2.14 ***Deleting measurement tools***

Procedure

To delete a measurement tool, do one of the following:

- Select the tool and press DELETE.
 - Select the tool, right-click and select **Delete**.
-


Related topics

- Section 7.1.2 – IR Viewer object toolbar on page 26
 - Section 7.2.1 – IR Viewer object on page 32
-

8.2.2.15 *Deleting infrared objects*

Procedure

Follow this procedure to delete an infrared object (except Field objects, Result Table objects and Summary Table objects):

1	Click anywhere on one of the following: <ul style="list-style-type: none">■ IR Viewer object■ IR Profile object■ IR Histogram object■ IR Trending object■ Digital Photo object
2	On the main toolbar, click  .

Related topics

Section 7.2 – Infrared objects on page 32

Procedure

- 1 Click anywhere in the Result Table object.

- 2 On the Microsoft® Word **Table** menu, point to **Delete** and then click **Table** to delete the currently selected table.

Section 7.2 – Infrared objects on page 32

8.2.2.17 *Deleting Summary Table objects*

Procedure

Follow this procedure to delete a Summary Table object:

1	Click anywhere in the Summary Table object.
2	On the Microsoft® Word Table menu, point to Delete and then click Table to delete the currently selected table.

Related topics

Section 7.2 – Infrared objects on page 32

NOTE This procedure applies to FLIR Reporter Field objects only (not Microsoft® Word fields).

1	Place the cursor just to the left of the Field object and click once. This will select the whole Field object.
2	Press DELETE on your keyboard.

Related topics [Section 7.2 – Infrared objects on page 32](#)

8.3

*Creating a custom infrared report template based on an existing template***General**

The easiest way to create a custom infrared report template is to modify an existing template.

By doing this, you can take advantage of the existing infrared objects already laid out on the report template page and you will save a lot of time compared to creating an infrared report template from scratch.

Procedure

1	Close all open infrared reports.
2	Point to New on the File menu.
3	Select New from template .
4	Select the infrared report template you want to use under the IR tab. Make sure you have selected Template .
5	Click OK .
6	To avoid overwriting the original template, save the template under a different file name before making any changes. When saving it, make sure you save it with the *.dot file name extension.
7	Make your changes in the template according to the following sections: <ul style="list-style-type: none"> ■ Section 8.2.1 – About the front & back covers on page 47 ■ Section 8.2.2 – Creating the infrared report template pages on page 48
8	Save the new infrared report template. When saving it, make sure you save it with the *.dot file name extension.

9 Creating Microsoft® Word document properties

9.1 *Creating & editing Microsoft® Word document properties*

General

When creating an infrared report, FLIR Reporter Professional extracts the Microsoft® Word *document properties* for the report template and inserts these properties in corresponding *Microsoft® Word fields* in the final report.

You can use these document properties to automate several time-consuming tasks when creating a report. For example, you may want FLIR Reporter Professional to automatically add information such as the name, address and e-mail address of the inspection site, the model name of the camera that you are using, your e-mail address, etc.

Types of document properties

There are two different types of document properties:

- Summary document properties
- Custom document properties

For the former, you can only change the values, but for the latter you can change both the labels and the values.

Procedure

Follow this procedure to create and edit a Microsoft® Word document property:

1	Start Microsoft® Word and then open one of the infrared report templates (*.dot) that are shipped with FLIR Reporter Professional. Users of Microsoft® XP operating systems can find the templates by typing the following path: C:\Documents and Settings\[Your user name]\Application Data\Mi-crosoft\Templates\IR
2	Click Properties on the File menu. This will display the Summary tab of the Properties dialog box.
3	Type your information in the appropriate text boxes.
4	Click the Custom tab.
5	To <i>add</i> a custom property, type a name in the Name box. To make your custom properties easy to find, you can type an underscore (_) as the first character in the name of the property.
6	To specify the <i>type</i> of property, select Text , Date , Number , or Yes or No in the Type box.
7	To specify the <i>value</i> of the property, type a text in the Value box.
8	Click Add to add the custom property to the list of properties, and then click OK .

- | | |
|----------|---|
| 9 | Save the infrared report template using a different file name but with the same file name extension (*.dot). You have now added summary and custom properties to your renamed infrared report template. |
|----------|---|

NOTE

- If you want to change the name of a custom document property, due to how the **Custom** tab of the **Properties** dialog box works in Microsoft® Word works there is no other way than deleting it and then recreating it. If you want to move a document property up or down, the whole list has to be re-created.
 - A Microsoft® Word field is not the same thing as the field you can insert by clicking on the field button on the main toolbar. Microsoft® Word fields are inserted by clicking **Field** on the **Insert** menu in Microsoft® Word.
 - You may find that a FLIR Systems property automatically has been added to your document. Do not remove this property. FLIR Reporter Professional uses it to distinguish between infrared documents and other documents.
-

9.2 *Creating a Microsoft® Word field and linking the field to a document property*

9.2.1 In Microsoft® Word XP

NOTE

This description assumes that you have created summary and custom properties according to section 9.1 – Creating & editing Microsoft® Word document properties on page 68.

Procedure

Follow this procedure to create a Microsoft® Word field and link the field to a document property:

1	In your infrared inspection report or report template, put the cursor where you want to insert the field and then click Field on the Insert menu.
2	Select DocProperty in the Field name box.
3	Select a property in the Property box.
4	Click OK to confirm your selection and leave the dialog box.

10 Creating text comment files

10.1 *Creating a text comment file*

General

In FLIR Reporter Professional you can create a text comment file to be used when carrying out your infrared inspections.

After having saved this text comment file to your hard disk drive and moved it to the camera on a CompactFlash™ card or an SD Memory Card, the text comments in the file will appear in the camera software.

For example, you can set the camera to prompt you for a text comment every time you save an image. The text comments you have created in FLIR Reporter Professional will be available for selection in the camera to be saved with the image.

Valid file format

The valid file format for a text comment file is *.tcf.

Procedure

Follow this procedure to create a text comment file:

1	On the FLIR Reporter Professional menu, click Text Comment Editor .
2	On the File menu, click New → Text Comment .
3	To create a new <i>text comment label</i> , click the left-most button at the top of <i>the left pane</i> . You can delete labels and move them up or down by using the other buttons at the top of the pane.
4	To create a new <i>text comment value</i> , click the label for which you want to create values, and then click the left-most button at the top of <i>the right pane</i> . You use the buttons at the top in the same way as when creating the labels.
5	When you have finished, save the text comment file to a CompactFlash® or SD Memory Card by clicking Save As on the File menu.

10.2 Linking a text comment to a Result Table object

General

When carrying out large inspections of similar objects—e.g., radiators or air conditioners in every room in a large office building—you will save a lot of time if you add rows for text comments in the result table *in your template*, rather than adding these rows afterwards *in the final report*.

When you have finished your inspection and moved the infrared images from your camera to your computer, the Wizard will extract the text comments from your images and insert them in the predefined rows in the Result Table object.

This requires that a 'dummy' text comment is added to the IR Viewer object in the report template. This 'dummy' text comment must have the same labels as the text comment file in the camera.

Procedure

Follow this procedure to link text comments to a Result Table object:

1	<p>In your report template, add a 'dummy' text comment to the IR Viewer object. Do this the following way:</p> <ol style="list-style-type: none"> 1 Right-click the IR Viewer object. 2 Select Settings. 3 Go to the Text Comments tab and enter a text comment. Make sure that this 'dummy' text comment has the same labels as the text comment file you will use in your camera.
2	<p>In your report template, create a Result Table object in which the text comments will be displayed.</p> <p>The contents of the Result Table object depends on your settings in the Contents dialog box. To display this dialog box, right-click the Result Table object and select Contents.</p> <p>Make sure that you select the text comment labels in this dialog box.</p>
3	Save the template under a different file name.
4	Create a text comment file with the same labels according to section 10.1 – Creating a text comment file on page 71.
5	Save the text comment file on a CompactFlash® card or an SD Memory Card and insert the card into your infrared camera.
6	Carry out your inspection as planned. Make sure your camera is set to ask you for a text comment when saving each image.
7	Insert your CompactFlash® card or SD Memory Card containing your images and generate a report using the ThermoCAM™ Wizard. When asked for a report template, select the report template you created in Steps 1–3 above.
8	When the Wizard has finished generating the report, you will find your text comments in the Result Table object created in Step 2.

11 Creating emissivity table files

General

In FLIR Reporter Professional you can create an emissivity table file to be used when carrying out your infrared inspections.

After having saved this emissivity table file to your hard disk drive and moved it to the camera using a CompactFlash™ card or an SD Memory Card, it will appear in the camera software. You can then set the emissivity from this emissivity table file when changing object parameters in the camera.

Definition

Emissivity is a value that specifies how much radiation an object emits, compared to the radiation of a theoretical reference object of the same temperature (called a 'blackbody').

Valid file format

The valid file format for an emissivity table file is *.etf.

Procedure

Follow this procedure to create an emissivity table file:

1	On the FLIR Reporter Professional menu, click Text Comment Editor .
2	On the File menu, click New → Emissivity Table .
3	To create a new <i>emissivity label</i> , click the left-most button at the top of <i>the left pane</i> . You can delete labels and move them up or down by using the other buttons at the top of the pane. If you don't need a subgroup for a material, you can enter the emissivity value at this stage, e.g. Iron = 0.21 .
4	To create a subgroup for a material, click the label for which you want to create the subgroup, and then click the left-most button at the top of <i>the right pane</i> . You use the buttons at the top in the same way as when creating the labels.
5	When you have finished, save the emissivity table file to a CompactFlash® or SD Memory Card by clicking Save As on the File menu.

Related topics

- Section 17 – Thermographic measurement techniques on page 127
- Section 21 – Emissivity tables on page 153

INTENTIONALLY LEFT BLANK

12 Creating formulas

General

By clicking **Formula** on the **Measurement** submenu when right-clicking an image, you can carry out advanced calculations on various objects in the infrared image.

A formula can contain all common mathematical operators and functions, such as +, -, ×, ÷, etc. Also, numerical constants such as π can be used.

Most importantly, references to measurement results, other formulas and other numerical data can be inserted into formulas.

NOTE

A formula can only operate on a single infrared image, not calculate, for example, differences between two infrared images.



Related topics

- Section 12.1 – Creating a simple formula on page 76
- Section 12.2 – Creating a conditional formula using the if statement on page 78

12.1 *Creating a simple formula*

Procedure

Follow this procedure to create a formula that calculates the difference between two spots in an infrared image:

1	In your document, insert an IR Viewer object.
2	Lay out two spots in the image.
3	Place the cursor below the image and insert a Result Table object. You can also insert a Result Table object after you have created your formula.
4	Right-click the IR Viewer object and select Formulas (Measurement → Formulas) . This will display the Formula dialog box.
5	Click Add to display a dialog box in which you define your new formula.
6	Do the following: <ol style="list-style-type: none"> 1 Click the  button to display a dialog box. 2 Click Sp2 in the left list box. 3 Click OK to leave the dialog box.
7	Click the minus button to add a subtraction mathematical operator.
8	Do the following: <ol style="list-style-type: none"> 1 Click the  button to display a dialog box. 2 Click Sp1 in the right list box. 3 Click OK to leave the dialog box.
9	The Formula dialog box will now display your formula using FLIR Systems formula syntax: <code>[ana.Sp2.temp] - [ana.Sp1.temp]</code>
10	Click Close to leave the dialog box.
11	Right-click the Result table object and select Contents .
12	In the left pane of the Table Items area, select the formula. Formulas are indicated by the Fo prefix.
13	Click OK to leave the dialog box. The formula and formula result are now displayed in your Result Table object.

INTENTIONALLY LEFT BLANK

12.2 Creating a conditional formula using the if statement




General


For some applications, you may want to display the result of a calculation in *green* font color if the result is *lower* than a critical value, and in *red* font color if the result is *higher* than the critical value.

You do this by creating a conditional formula using the if statement.

Procedure

Follow this procedure to create a conditional formula using the if statement:

1	Repeat the procedure above in a new document, but do not create a Result Table object.
2	Click the IR Viewer object.
3	Right-click the IR Viewer and select Formulas (Measurement → Formulas) . This will display the Formula dialog box.
4	Do the following: 1 Click Add to display a dialog box in which you define your new formula. 2 Click the if button to display a new dialog box.
5	You will now set up a conditional formula that displays the result from the Fo1 formula in red if the value is higher than 2.0 degrees, and in green if the value is lower than 2.0 degrees. Do the following: 1 Click the  button to the right of the top text box, select Fo1 and click OK . 2 In the top text box, type '>2.0' to the right of the formula (without quotation marks). This will be your condition. 3 Click the  button to the right of the middle text box, select Fo1 and click OK . 4 To the right of the middle text box, click Default Color and select a red color. 5 Click the  button to the right of the bottom text box, select Fo1 and click OK . 6 To the right of the bottom text box, click Default Color and select a green color. 7 Click OK to leave the dialog box.
6	You will now see the complete conditional formula in the Formula dialog box. The two 10-digit code strings after the equals sign represent the colors. <pre>if([ana.Fo1.val]>2.0;[ana.Fo1.val]=0x000000ff; [ana.Fo1.val]=0x00009300)</pre>
7	Click OK to leave the dialog box.
8	Click Close .

9	Place the cursor below your image and click the  toolbar button. This will display the Field Contents dialog box.
10	<p>Do the following:</p> <ol style="list-style-type: none"> 1 Click the formula in the left pane. 2 Click OK. <p>A Field object will now be inserted below you image and the result of the Fo1 formula will be displayed in red or green, depending on the measured values of the two spotmeters.</p>

NOTE

These types of conditional formulas can be connected to the following objects:

- Field objects
- Result table
- Summary table

INTENTIONALLY LEFT BLANK

13 Converting radiometric sequence files

General

In FLIR Reporter Professional, you can convert a radiometric sequence file (*.seq) to an *.avi file.


The AVI format stands for *Audio Video Interlaced* and was created by Microsoft® and introduced along with Windows 3.1. It is one of the most widespread semi-professional video formats and will let you or your recipients view the converted sequence file in a variety of video applications.

Valid file formats

- The valid file format for a radiometric sequence file is *.seq.
- The valid file format for an AVI file is *.avi.

Procedure

Follow this procedure to convert a sequence file to an AVI file:

1	On the FLIR Reporter Professional menu, click Create AVI File .
2	Click Next to continue. This will display the Open File dialog box.
3	Click Open to locate the file you want to convert.
4	Double-click the file you want to convert. By default the converted file will be saved at the same location with the new file name extension (*.avi). You can specify a different file name and location by clicking  .
5	Click Next to continue.
6	Do the following: 1 Select which video compression algorithm you want to use – Microsoft video (recommended) or Additional codecs . 2 Specify the frame rate, which is the number of frames that will be displayed per second. 3 Click Next to continue.
7	Click Finish to create your AVI file.

INTENTIONALLY LEFT BLANK

14 Software reference section

General

Since FLIR Reporter Professional seamlessly integrates with the Microsoft® Word environment, it will be displayed as a menu and additional toolbars, as well as a number of shortcut menus. In this section all menus, submenus, and dialog boxes will be described in detail.

Related topics

- Section 14.1 – FLIR Reporter Professional menu on page 84
 - Section 14.2 – Explanation of the QuickInsert dialog box on page 86
 - Section 14.3 – Shortcut menu for IR Viewer objects on page 87
 - Section 14.5 – Shortcut menu for measurement tools on page 97
 - Section 14.6 – Shortcut menu for IR Profile objects on page 101
 - Section 14.7 – Shortcut menu for IR Histogram objects on page 105
 - Section 14.8 – Shortcut menu for IR Trending objects on page 110
 - Section 14.9 – Shortcut menu for Digital Photo objects on page 117
 - Section 14.10 – Shortcut menu for Result table objects on page 118
 - Section 14.11 – Shortcut menu for Field objects on page 119
 - Section 14.12 – Shortcut menu for Summary Table objects on page 120
-

14.1 *FLIR Reporter Professional menu*

IR Viewer	Click to insert an IR Viewer object for infrared images and sequence file. An infrared image or sequence file contains valid temperature information that may be output by overlaying different kinds of measurement tools, such as spotmeters, profiles, areas, etc.
IR Profile	Click to insert an IR Profile object. An IR Profile object contains a graph showing pixel values along a line in an infrared image.
IR Histogram	Click to insert an IR Histogram object. An IR Histogram object contains a graph illustrating how pixels in the image are distributed by graphing the number of pixels at each temperature level.
IR Trending	Click to insert an IR Trending object. A trending object is a graphical representation of measurement values or text comment values on the Y-axis by infrared report pages or infrared images on the X-axis sorted by time, page number or text comment values. It can also display probable trends, according to different algorithms.
Digital Photo	Click to insert a Digital Photo object. This photo may be taken with a stand-alone digital camera, or with the digital visual camera featured on some FLIR Systems infrared cameras. Only use this method to insert a photo when you design a report template. In all other situations, insert photos by clicking Picture on the Insert menu (Insert → Picture → From File).
Insert Table	Click to insert an Result Table object into your current document. A Result Table object displays the results of the measurement tools laid out in the infrared image, as well as other information that is related to the infrared image.
Insert Field	Click to insert an Field object into your current document. A Field object can be linked to values or texts in your infrared image.
Insert Summary Table	Click to insert an Summary Table object. A Summary Table object lists infrared data of your choice from all infrared images in the report, one row per image.
Duplicate Page	Click to duplicate the current page and insert the duplicate page after the current page.
Delete Page	Click to delete the current page.
Delete	Click this toolbar button and then click an infrared object to remove the infrared object from your report.
Connect	Click to connect infrared objects to each other—for example, an IR Profile object to an IR Viewer object.
QuickInsert	Click to display the QuickInsert dialog box, where you can create a report by using a pre-defined page layout, or modify an existing page layout.


	For more information, see section 14.2 – Explanation of the QuickInsert dialog box on page 86.
Create PDF Document	Click to create an Adobe® PDF document of the Microsoft® Word document. A free version of Adobe® Reader is available from http://adobe.com/products/acrobat/read-step2.html .
Create AVI File	For more information, see section 13 – Converting radiometric sequence files on page 81.
Text Comment Editor	Click to start a text comment editor where you can create text comment files and emissivity table files.
Help	Click to display online help.
Check for updates	Click to check for program updates.
Open Reporter 8 manual	Click to display the user's manual as an Adobe® PDF document.
Select Units	Click to display a dialog box where you can set units.
Select Language	Click to display a dialog box where you can set language.

14.2 Explanation of the QuickInsert dialog box

NOTE

This explanation refers to the dialog box that is displayed when you click **Customize QuickInsert**.

Explanation

Name	The name of the page layout you are currently creating.
Size → Number of columns	The number of columns in the page layout. <i>Example:</i> One infrared image next to one photo equals two columns.
Size → Number of rows	The number of rows in the page layout. <i>Example:</i> One infrared image above one photo equals two rows.
Contents	A visual representation of the page layout. The numbers refer to the rows and the capital letters refer to the columns. The label Merge will merge (<i>i.e.</i> straddle) two horizontal items into one single item. Note that the Merge command prioritizes the first item in a row.
	A method to connect, or link, two objects.
Add a result table	To add a result table below your page layout, select this box.

14.3 *Shortcut menu for IR Viewer objects*

Open	To open an image in the IR Viewer, or change the current image to a new image, click Open .
Save As	To save the currently displayed image to your hard disk drive, click Save As .
Show IR Scale	To show/hide the IR scale at the far right in the infrared image, click Show IR Scale .
Zoom	To zoom in on the currently displayed image, click 1×, 2×, 4×, or 8× on the Zoom menu.
Settings	For more information, see section 14.3.1 – Settings dialog box on page 89.
Image Fusion	To display the image fusion dialog box, click Image Fusion . In this dialog box you can fuse an infrared image with a digital photo. Fusing images can make it easier to identify the exact position of temperature anomalies.

Follow this procedure to fuse an infrared image with a digital photo:

1	Click Open IR Image and select an infrared image.
2	Click Open Photo and select the corresponding digital photo.
3	In the infrared image, define the positions of interest by moving the three reference crosshairs to these positions.
4	In the digital photo, move the three reference crosshairs to the corresponding positions.
5	To display the fused image, click OK .

In the IR Viewer object you can adjust the exact position of the digital photo in the fused image by doing one or more of the following:

- To move the digital photo up/down or left/right in 1 pixel increments, use the arrow keys on your keyboard.
- To rotate the digital photo clockwise/counter-clockwise in 1° increments, use the Page Up and Page Down keys on your keyboard.

Explanation of additional buttons and controls:

Label	Explanation
View Full Image	To view the full image, click View Full Image .
Ref#1	To zoom in on crosshair #1, click Ref#1 .
Ref#2	To zoom in on crosshair #2, click Ref#2 .
Ref#3	To zoom in on crosshair #3, click Ref#3 .
Picture in Picture (PiP)	To display the digital photo in its original size, select Picture in Picture (PiP) .

Label	Explanation
Visual image in black and white	To display the digital photo in grayscale, select Visual image in black and white .
Open Photo	To open a digital photo, click Open Photo .
Threshold	<p>To use one temperature interval for the infrared image and use the digital photo for lower and higher temperatures, select Threshold and enter the desired temperature values in the corresponding text boxes.</p> <p>You can adjust the temperature levels by dragging the sliders in the IR Viewer object, once you have closed the dialog box.</p>
Blending	<p>To mix the image from infrared pixels and digital photo pixels, select Blending.</p> <p>You can adjust the mixing levels by dragging the sliders in the IR Viewer object, once you have closed the dialog box.</p>

Rotate Left To rotate the image 90° to the left, click **Rotate Left**.

Rotate Right To rotate the image 90° to the right, click **Rotate Right**.

Formulas To create a formula, click **Formula**.

For more information about creating formulas, see section 12 – Creating formulas on page 75.

14.3.1 Settings dialog box

14.3.1.1 Colors tab

Explanation

Label	Explanation
Browse	To open palette files (*.pal) stored at a different location, click Browse .
Advanced	To open a dialog box where you can select advanced parameters, click Advanced .
Max. Temperature	To define the maximum level temperature of the scale, type a temperature value in the text box.
Min. Temperature	To define the minimum level temperature of the scale, type a temperature value in the text box.
Invert palette	To invert the color distribution in a palette vertically, select this check box.
Show out of range colors	To assign a special color for temperatures outside the calibrated temperature range of the infrared camera, select this check box.
Show saturation colors	To assign a special color for the temperatures outside the scale limits, select this check box.
Use bilinear filtering to enhance image quality	To improve the image quality, select this check box.
Histogram equalization	This is an image-displaying method that evenly distributes the color information over the existing temperatures of the image. This method to distribute the information can be particularly successful when the image contains few peaks of very high temperature values.
Signal linear	This is an image-displaying method where the color information in the image is distributed linear to the signal values of the pixels.
Output linear	This selection works in conjunction with the settings under Preferred output on the Preferences tab. This is an image-displaying method where you can distribute the colors either according to <i>temperature</i> or according to <i>object signal</i> .

14.3.1.2 Isotherms *tab*




Explanation

Label	Explanation
Delete	To delete an isotherm, click this button.
Solid	To assign a solid color to an isotherm, select this option button and select a color in the drop-down list box.
Contrast	To assign a contrasting color to an isotherm, select this option button and select a color in the drop-down list box.
Palette	To open a palette and use this palette for the isotherm, select Palette and click Open .
Max. Temperature	<p>To set the maximum temperature of an isotherm, enter a new value here and click Apply.</p> <p>Isotherms may exist outside the temperature range of the current image, which will make the isotherm invisible. By changing the maximum temperature, invisible isotherms can be brought back into range.</p>
Min. Temperature	<p>To set the minimum temperature of an isotherm, enter a new value here and click Apply.</p> <p>Isotherms may exist outside the temperature range of the current image, which will make the isotherm invisible. By changing the minimum temperature, invisible isotherms can be brought back into range.</p>
Indoor air temperature	<p>(This text box is only displayed when an insulation alarm is active.)</p> <p>This parameter refers to the air temperature inside the building in question when setting up insulation alarms. An insulation alarm is an alarm that can detect an area where there may be a risk of humidity in a building structure</p>
Outdoor air temperature	<p>(This text box is only displayed when an insulation alarm is active.)</p> <p>This parameter refers to the air temperature outside the building in question when setting up insulation alarms.</p>

Label	Explanation
Insulation factor	<p>(This text box is only displayed when an insulation alarm is active.)</p> <p>The insulation factor is the accepted energy loss through the wall. Different building codes recommend different values, but typical values are 0.70-0.80 for new buildings.</p> <p>Note: Refer to your national building code for recommendations.</p>
Atmospheric Temperature	<p>(This text box is only displayed when a humidity alarm is active.)</p> <p>This parameter refers to the atmospheric temperature when setting up humidity alarms. A humidity alarm is an alarm that can detect what may be an insulation deficiency in a wall.</p>
Relative air humidity	<p>(This text box is only displayed when a humidity alarm is active.)</p> <p>This parameter refers to the relative air humidity when setting up humidity alarms.</p>
Humidity Alarm Level	<p>(This text box is only displayed when a humidity alarm is active.)</p> <p>The humidity alarm level is the critical limit of relative humidity that you want to detect in, e.g., a building structure. For example, mold will grow on areas where the relative humidity is less than 100% and you may want to find such areas of interest.</p> <p>Note: Refer to your national building code for recommendations.</p>


14.3.1.3 Annotations tab

Explanation

Label	Explanation				
Label	<p>The label of a text comment. Example:</p> <table border="1"> <tr> <th>Label</th><th>Value</th></tr> <tr> <td>Company</td><td>FLIR Systems</td></tr> </table>	Label	Value	Company	FLIR Systems
Label	Value				
Company	FLIR Systems				
Value	<p>The value of a text comment. Example:</p> <table border="1"> <tr> <th>Label</th><th>Value</th></tr> <tr> <td>Company</td><td>FLIR Systems</td></tr> </table>	Label	Value	Company	FLIR Systems
Label	Value				
Company	FLIR Systems				
Add	To display a dialog box where you can add a new text comment, click Add .				
Edit	To display a dialog box where you can change the label and value, click Edit .				
Delete	To delete the text comment, select the text comment and then click Delete .				
Image Description	<p>An image description is a brief textual description that is stored inside an image file. It can be created using a Pocket PC and then beamed to the camera using the IrDA communication link.</p> <p>If the image has an image description, the text will be displayed in this edit box. If not, you can add an image description for the image by entering text.</p> <p>The maximum number of characters in an image description is 512.</p>				
	Click to listen to a voice comment.				
	Click to pause current playback.				
	Click to stop current playback.				
Sketch	<p>Click to display a dialog box where you can view a freehand sketches that is associated with an image.</p> <p>Note: Not all cameras support creating freehand sketches.</p>				

14.3.1.4 Object Parameters *tab*

Explanation

Label	Explanation
Emissivity	<p>To change the emissivity, enter a new value and click Apply. You can also select a preset emissivity from a table by clicking .</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Reflected apparent temperature	<p>To change the reflected apparent temperature, enter a new value and click Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Atmospheric Temperature	<p>To change the atmospheric temperature, enter a new value and click Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Relative humidity	<p>To change the relative humidity, enter a new value and click Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Distance to object	<p>To change the distance, enter a new value and click Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Temperature	<p>To specify the temperature of, e.g., an external lens or heat shield, enter a new value and click OK and Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Transmission	<p>To specify the transmission of, e.g., an external lens or heat shield, enter a new value and click OK and Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>

Label	Explanation
Computed transmission	<p>FLIR Reporter Professional can compute the transmission based on atmospheric temperature and relative humidity.</p> <p>Clear the user-defined option button to use the computed transmission.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Fixed transmission	<p>Select this option button, enter a value and click OK and Apply if you want to use a specific transmission.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Value	<p>To specify the reference temperature, enter a value and click OK and Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>

14.3.1.5 Preferences *tab*

Explanation

Label	Explanation
Pre-defined measurement symbols and isotherms	If this box is selected all new images will use the analysis symbols and isotherms you set up in the Settings dialog box, instead of using the image's own settings from the camera.
Pre-defined palette and color distribution	If his box is selected all new images will use the palette and color distribution you set up in the Settings dialog box, instead of using the image's own settings from the camera.
Pre-defined object parameters	If this box is selected all new images will use the object parameters you set up in the Settings dialog box, instead of using the image's own settings from the camera.
Scale limits from image	To use the new image's scale limits, select this check box.
Auto-adjust	To autoadjust the image upon importing it, select this check box.
Max. Temperature	To pre-define the scale limit for the new image, enter the maximum temperature level here and click Apply .
Min. Temperature	To pre-define the scale limit for the new image, enter the minimum temperature level here and click Apply .
Temperature	To output the pixel information as temperature in degrees Kelvin, Celsius, or Fahrenheit, select this option button.
Object signal	To output the pixel information as an object signal, select this option button.

14.4 *Shortcut menu for isotherms and IR scales*

Delete	<p>To open delete an isotherm, select Delete.</p> <p>Note: This menu command is not available when right-clicking IR scales.</p>
Palette	<p>To change the palette, select Palette. This will display the Colors tab in the Settings dialog box.</p> <p>For more information about palettes, see section 14.3.1.1 – Colors tab on page 89.</p>
Isotherm	<p>To change the isotherm, select Isotherm. This will display the Isotherm tab in the Settings dialog box.</p> <p>For more information about isotherms, see section 14.3.1.2 – Isotherms tab on page 90.</p>

14.5 *Shortcut menu for measurement tools*

Cursor	Applicable for lines only: Click to create a cursor that you can move along the line.
Delete	To remove the currently selected measurement tool from the infrared image, click Delete .
Cold Spot	Applicable for all measurement tools except spotmeter, difference calculation, and marker: To create a spotmeter at the coldest location in the area, click Cold Spot .
Hot Spot	Applicable for all measurement tools except spotmeter, delta, and marker: To create a spotmeter at the hottest location in the area, Hot Spot .
Formulas	For more information, see section 12 – Creating formulas on page 75.
Settings	For more information, see section 14.5.1 – Settings dialog box on page 98.
Image	This section is identical to section 14.3 – Shortcut menu for IR Viewer objects on page 87.

14.5.1 Settings dialog box


14.5.1.1 General tab

Explanation

Label	Explanation
Label	To specify a label (<i>i.e.</i> a name appearing in the infrared image) for this measurement tool, enter a name here and click Apply .
Show label	To show the label for the measurement tool, select Show label .
Show value	To display the value of the measurement tool (<i>i.e.</i> the measurement result) in the infrared image, select the value type and click Apply . The number of possible value types differs between different measurement tools.
Font size	To specify the font size of the label, select a font size in the Font size box and click Apply .
Measurement symbol	To specify the color of the symbol for the measurement tool, select a color in the Measurement symbol box and click Apply .
Text	To specify the color of the label text, select a color in the Text box and click Apply .
Text background	To specify the color of the background, select a color in the Text background box and click Apply .
Set as default	To use these settings as default settings for all measurement tools, click Set as default and click Apply .

14.5.1.2 Object Parameters *tab*

Explanation

Label	Explanation
Custom	To specify custom parameters, select Custom , enter new values in the three text boxes and click Apply .
Emissivity	<p>To change the emissivity, enter a new value and click Apply. You can also select a preset emissivity from a table by clicking .</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Distance to object	<p>To change the distance, enter a new value and click Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Reflected apparent temperature	<p>To change the reflected apparent temperature, enter a new value and click Apply.</p> <p>For more information about object parameters, see section 17 – Thermographic measurement techniques on page 127.</p>
Set as default	To use these object parameters settings as default settings for all measurement tools, select Set as default and click Apply .

14.5.1.3 Size/Position tab

Explanation

Label	Explanation
X	To change the X-position for a measurement tool, enter a negative or positive value and press Apply to move the measurement tool the same number of pixels, relative to its original position.
Y	To change the Y-position for a measurement tool, enter a negative or positive value and press Apply to move the measurement tool the same number of pixels, relative to its original position.
Height	To change the height of a measurement tool, enter a value and press Apply to specify a new height of the measurement tool.
Width	To change the width of a measurement tool, enter a value and press Apply to specify a new width of the measurement tool.
Rotate	To rotate a measurement tool, enter a negative or positive value and press Apply to specify a new angle of rotation for the measurement tool.

14.6 *Shortcut menu for IR Profile objects*

Grid Lines	To display a grid of horizontal lines in the IR Profile object, click Grid Lines .
Legend	To display a legend below the IR Profile object, click Legend .
Show Only Visible Profile Lines in Legend	If two or more lines are laid out in the infrared image, clicking Show Only Visible Profile Lines in Legend will remove any cleared line results from the legend below the IR Profile object.
3D View	To create a three-dimensional rendering of the graph of the IR Profile object, click 3D View .
Swap X & Y Axes	To swap the X- and Y-axes of the IR Profile object, click Swap X & Y Axes .
Settings	For more information, see section 14.6.1 – Settings dialog box on page 102.

14.6.1 Settings dialog box

14.6.1.1 General tab

Explanation

Label	Explanation
Grid Lines	To display a grid of horizontal lines in the IR Profile object, click Grid Lines .
Legend	To display a legend below the IR Profile object, click Legend .
Show Only Visible Profile Lines in Legend	If two or more lines are laid out in the infrared image, clicking Show Only Visible Profile Lines in Legend will remove any cleared line results from the legend below the IR Profile object.
3D View	To create a three-dimensional rendering of the graph of the IR Profile object, click 3D View .
Swap X & Y Axes	To swap the X- and Y-axes of the IR Profile object, click Swap X & Y Axes .
Columns	To add or remove columns in the IR Profile object, select or clear these boxes.
IR Scale	To use the IR scale as the temperature axis, select this option button and click Apply .
Auto	To let FLIR Reporter Professional automatically define the temperature axis, select this option button and click Apply .
Fixed	To manually define the maximum and minimum axis temperature, select this option button, enter new values and click Apply .
Max. Temperature	See above.
Min. Temperature	See above.
Threshold	To display a horizontal line at a certain temperature in the IR Profile object, enter a value in the text box and click Apply .

14.6.1.2 Color tab

Explanation

Label	Explanation
Background	To change the color of the table background, select a new color from the drop-down list box and click Apply .
Plot Area	To change the color of the plot area, select a new color from the drop-down list box and click Apply .
Text	To change the color of the table text, select a new color from the drop-down list box and click Apply .
Axes	To change the color of the axes, select a new color from the drop-down list box and click Apply .
Grid	To change the color of the grid lines, select a new color from the drop-down list box and click Apply .

14.6.1.3 **Lines *tab***

Explanation	To select the line you want to connect the IR Profile object to, select a check box and click Apply .
--------------------	--

14.7 *Shortcut menu for IR Histogram objects*

Grid Lines	To display a grid of horizontal lines in the IR Histogram object, click Grid Lines .
Legend	To display a legend below the IR Histogram object, click Legend .
3D View	To create a three-dimensional rendering of the graph of the IR Histogram object, click 3D View .
Swap X & Y Axes	To swap the X- and Y-axes of the IR Histogram object. click Swap X & Y Axes .
Settings	For more information, see section 14.7.1 – Settings dialog box on page 106.

14.7.1 Settings dialog box

14.7.1.1 General tab

Explanation

Label	Explanation
Grid Lines	To display a grid of horizontal lines in the IR Histogram object, click Grid Lines .
Legend	To display a legend below the IR Histogram object, click Legend .
3D View	To create a three-dimensional rendering of the graph of the IR Histogram object, click 3D View .
Swap X & Y Axes	To swap the X- and Y-axes of the IR Histogram object, click Swap X & Y Axes .
Use palette	To use a color palette for the three-dimensional rendering of the IR Histogram object, select Use palette and click Apply .
Columns	To add or remove columns in the IR Histogram object, select or clear these boxes.
None	Select this option button if no threshold should be used in the IR Histogram object.
Step	To use a <i>step</i> threshold in the IR Histogram object, select this option button. A <i>step</i> threshold shows how many percent of the pixels are below and above a specific temperature. The percentages are displayed in the IR Histogram object legend below the IR Histogram object.
Band	To use a <i>band</i> threshold in the IR Histogram object, select this option button. A <i>band</i> threshold shows how many percent of the pixels are below a lower temperature, between this lower temperature and a higher temperature, and above that higher temperature. The percentages are displayed in the threshold legend below the IR Histogram object.
IR Scale	To use the IR scale as the temperature axis, select this option button and click Apply .
Auto	To let FLIR Reporter Professional automatically define the temperature axis, select this option button and click Apply .

Label	Explanation
Fixed	To manually define the maximum and minimum axis temperature, select this option button, enter new values and click Apply .
Max. Temperature	See above.
Min. Temperature	See above.
Percentage axis → Auto	To let FLIR Reporter Professional automatically define the percentage axis, select this option button and click Apply .
Percentage axis → Fixed	To manually define the percentage axis, select this option button, enter a new value and click Apply .

14.7.1.2 Color tab

Explanation

Label	Explanation
Background	To change the color of the table background, select a new color from the drop-down list box and click Apply .
Plot Area	To change the color of the plot area, select a new color from the drop-down list box and click Apply .
Text	To change the color of the text, select a new color from the drop-down list box and click Apply .
Axes	To change the color of the axes, select a new color from the drop-down list box and click Apply .
Grid	To change the color of the grid, select a new color from the drop-down list box and click Apply .
Threshold	To change the color of the threshold, select a new color from the drop-down list box and click Apply .
Limit	To change the color of the limit, select a new color from the drop-down list box and click Apply .
Bar color	To change the color of the bar color, select a new color from the drop-down list box and click Apply .

14.7.1.3**Lines *tab*****Explanation**

To select the line you want to connect the IR Histogram object to, select a check box and click **Apply**.

14.8 *Shortcut menu for IR Trending objects*

Grid Lines	To display a grid of horizontal lines in the IR Trending object, click Grid Lines .
Legend	To display a legend below the IR Trending object, click Legend .
Show Only Visible Plot Lines in Legend	To display trend lines in the legend that you have cleared on the Lines tab, click Show Only Visible Plot Lines in Legend .
3D View	To create a three-dimensional rendering of the graph of the IR Trending object, click 3D View .
Swap X & Y Axes	To swap the X-and Y-axes of the IR Trending object, click Swap X & Y Axes .
Refresh	To update the trending graph, click Refresh .
Settings	For more information, see section 14.8.1 – Settings dialog box on page 111.

14.8.1 Settings dialog box

14.8.1.1 Connect *tab*

Explanation

Label	Explanation
Y Axis	To specify a parameter for the Y-axis, click Add and select a label and value for in the left and right pane, respectively.
Time	To specify time as the X-axis parameter, select the Time option button.
Image sequence number	To specify an incrementally stepped image sequence number as the X-axis parameter, select the Image sequence number option button.
Text Comment	<p>To specify text comments as the X-axis parameter, select the Text Comment option button.</p> <p>When using text comments as the X-axis parameter, all images must have the same text comment label. The value of the text comment must be a numerical value.</p>

14.8.1.2 General tab

Explanation

Label	Explanation
Grid Lines	To display a grid of horizontal lines in the IR Trending object, click Grid Lines .
Legend	To display a legend below the IR Trending object, click Legend .
Show Only Visible Plot Lines in Legend	To display trend lines in the legend that you have cleared on the Lines tab, click Show Only Visible Plot Lines in Legend .
3D View	To create a three-dimensional rendering of the graph of the IR Trending object, click 3D View .
Swap X & Y Axes	To swap the X-and Y-axes of the IR Trending object, click Swap X & Y Axes .
All	To include all images for the trending, select the All option button.
Items	To include a range of adjacent or non-adjacent images, click Images and select the images you want to include.
Threshold	To display a horizontal baseline in the IR Trending object, enter a value.

14.8.1.3 Prediction tab

Explanation

Label	Explanation
Forward	To specify the number of periods forward for which the algorithms will present a probable trend, select a value in the Forward box. <i>The probable trend is a mathematical approximation only.</i>
Backward	To specify the number of periods backward for which the algorithms will present a probable trend, select a value in the Backward box. <i>The probable trend is a mathematical approximation only.</i>
None	To disable Trend Regression type , select None .
Linear	To use a linear trending algorithm, select Linear . This algorithm uses the following mathematical expression: $y = m \times x + c$
Logarithmic	To use a logarithmic trending algorithm, select Logarithmic . This algorithm uses the following mathematical expression: $y = m \times \ln(x) + c$
Power	To use a power trending algorithm, select Power . This algorithm uses the following mathematical expression: $y = e^c \times x^m$
Exponential	To use an exponential trending algorithm, select the Exponential option button. This algorithm uses the following mathematical expression: $y = \exp(c) \times e^{(m \times x)}$
Polynomial	To use a polynomial trending algorithm, select the Polynomial option button. This algorithm uses the following mathematical expression: $y = a_0x^0 + a_1x^1 + a_2x^2 + \dots + a_kx^k, \text{ where } k = \text{order.}$
Moving average	To use a moving average trending algorithm, select the Moving average option button. This algorithm uses the following mathematical expression: An n-period moving average is the average value over the previous n time periods.
Display equation on chart	To display the equation on the chart, select Display equation on chart .

Label	Explanation
Display R-squared value on chart	To display a numerical value that indicates how successful the algorithm is to approximate the curve, select Display R-squared value on chart . The value is between 0 and 1, where 0 is poor quality and 1 is high quality.

14.8.1.4

Color tab

Explanation

Label	Explanation
Background	To change the color of the table background, select a new color from the drop-down list box and click Apply .
Plot Area	To change the color of the plot area, select a new color from the drop-down list box and click Apply .
Text	To change the color of the table text, select a new color from the drop-down list box and click Apply .
Axes	To change the color of the axes, select a new color from the drop-down list box and click Apply .
Grid	To change the color of the grid lines, select a new color from the drop-down list box and click Apply .

14.8.1.5 **Line *tab***

Explanation	<div><hr/></div> <ul style="list-style-type: none">■ To specify which lines should be displayed in the IR Trending object, select one or more of the check boxes.■ To specify color, select a new color from the drop-down list box.■ To specify line type, select a new line type from the drop-down list box <div><hr/></div>
--------------------	---

14.9 *Shortcut menu for Digital Photo objects*

Open	To open a visual image, click Open .
------	---

14.10 *Shortcut menu for Result table objects*

NOTE	The menu items Borders and Shading and Spelling will not be described here, since these are standard Microsoft® Word features.
Contents	To select a label and value for a Result Table object, select the label in the left pane and its value in the right pane and click Apply .
Refresh	To update the Result Table object, click Refresh .

14.11 *Shortcut menu for Field objects*

NOTE	The menu items Borders and Shading and Spelling will not be described here, since these are standard Microsoft® Word features.
Contents	To select a label and value for a Field object, select the label in the left pane and its value in the right pane and click Apply .
Refresh	To update the Field object, click Refresh .

14.12 *Shortcut menu for Summary Table objects*

NOTE	The menu items Borders and Shading and Spelling will not be described here, since these are standard Microsoft® Word features.
Contents	To select a label and value for a Summary Table object, select the label in the left pane and its value in the right pane and click Apply .
Refresh	To update the Summary Table object, click Refresh .

15 Supported file formats in the IR Viewer object

Radiometric file formats

The IR Viewer object supports the following radiometric file formats:

- ThermaCAM™ radiometric *.jpg
 - ThermaCAM™ radiometric *.img
 - ThermaCAM™ radiometric 8-bit *.tif
 - ThermaCAM™ radiometric 8/12-bit *.tif
 - ThermaCAM™ radiometric 12-bit *.tif
 - ThermoTeknix® *.tgw
 - ThermoTeknix® *.tmw
 - ThermoTeknix® *.tlw
 - ThermaCAM™ radiometric *.seq (radiometric sequence files)
-

INTENTIONALLY LEFT BLANK

16 About FLIR Systems

16

FLIR Systems was established in 1978 to pioneer the development of high-performance infrared imaging systems, and is the world leader in the design, manufacture, and marketing of thermal imaging systems for a wide variety of commercial, industrial, and government applications. Today, FLIR Systems embraces four major companies with outstanding achievements in infrared technology since 1965—the Swedish AGEMA Infrared Systems (formerly AGA Infrared Systems), and the three United States companies Indigo Systems, FSI, and Inframetrics.

10722703.a1



Figure 16.1 **LEFT:** Thermovision® Model 661 from 1969. The camera weighed approximately 25 kg (55 lb.), the oscilloscope 20 kg (44 lb.), and the tripod 15 kg (33 lb.). The operator also needed a 220 VAC generator set, and a 10 L (2.6 US gallon) jar with liquid nitrogen. To the left of the oscilloscope the Polaroid attachment (6 kg/13 lb.) can be seen. **RIGHT:** InfraCAM from 2006. Weight: 0.55 kg (1.21 lb.), including the battery

The company has sold more than 40,000 infrared cameras worldwide for applications such as predictive maintenance, R & D, non-destructive testing, process control and automation, and machine vision, among many others.

FLIR Systems has three manufacturing plants in the United States (Portland, OR, Boston, MA, Santa Barbara, CA) and one in Sweden (Stockholm). Direct sales offices in Belgium, Brazil, China, France, Germany, Great Britain, Hong Kong, Italy, Japan, Sweden, and the USA—together with a worldwide network of agents and distributors—support our international customer base.

FLIR Systems is at the forefront of innovation in the infrared camera industry. We anticipate market demand by constantly improving our existing cameras and developing new ones. The company has set milestones in product design and development such as the introduction of the first battery-operated portable camera for industrial inspections, and the first uncooled infrared camera, to mention just two innovations.

FLIR Systems manufactures all vital mechanical and electronic components of the camera systems itself. From detector design and manufacturing, to lenses and system electronics, to final testing and calibration, all production steps are carried out and supervised by our own engineers. The in-depth expertise of these infrared specialists ensures the accuracy and reliability of all vital components that are assembled into your infrared camera.

16.1 *More than just an infrared camera*

At FLIR Systems we recognize that our job is to go beyond just producing the best infrared camera systems. We are committed to enabling all users of our infrared camera systems to work more productively by providing them with the most powerful camera–software combination. Especially tailored software for predictive maintenance, R & D, and process monitoring is developed in-house. Most software is available in a wide variety of languages.

We support all our infrared cameras with a wide variety of accessories to adapt your equipment to the most demanding infrared applications.

16.2 *Sharing our knowledge*

Although our cameras are designed to be very user-friendly, there is a lot more to thermography than just knowing how to handle a camera. Therefore, FLIR Systems has founded the Infrared Training Center (ITC), a separate business unit, that provides certified training courses. Attending one of the ITC courses will give you a truly hands-on learning experience.

The staff of the ITC are also there to provide you with any application support you may need in putting infrared theory into practice.

16.3 *Supporting our customers*

FLIR Systems operates a worldwide service network to keep your camera running at all times. If you discover a problem with your camera, local service centers have all the equipment and expertise to solve it within the shortest possible time. Therefore, there is no need to send your camera to the other side of the world or to talk to someone who does not speak your language.

16.4

A few images from our facilities

16

10401303.a:1

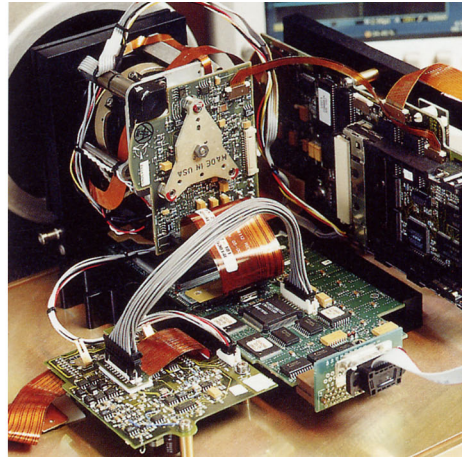
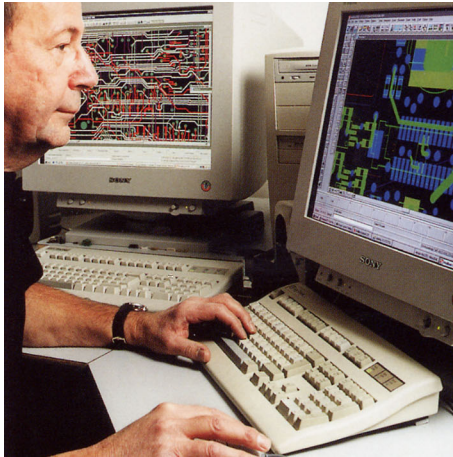


Figure 16.2 LEFT: Development of system electronics; RIGHT: Testing of an FPA detector

10401403.a:1

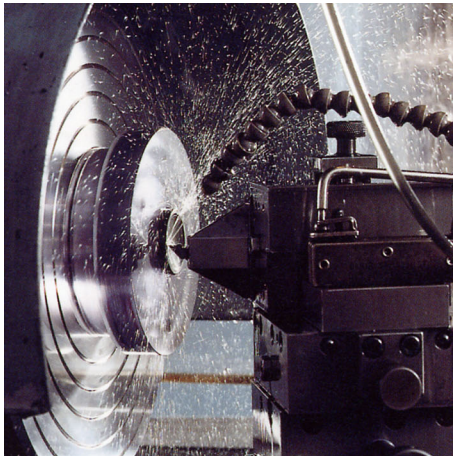


Figure 16.3 LEFT: Diamond turning machine; RIGHT: Lens polishing



Figure 16.4 LEFT: Testing of infrared cameras in the climatic chamber; RIGHT: Robot used for camera testing and calibration

17 Thermographic measurement techniques

17.1 *Introduction*

An infrared camera measures and images the emitted infrared radiation from an object. The fact that radiation is a function of object surface temperature makes it possible for the camera to calculate and display this temperature.

However, the radiation measured by the camera does not only depend on the temperature of the object but is also a function of the emissivity. Radiation also originates from the surroundings and is reflected in the object. The radiation from the object and the reflected radiation will also be influenced by the absorption of the atmosphere.

To measure temperature accurately, it is therefore necessary to compensate for the effects of a number of different radiation sources. This is done on-line automatically by the camera. The following object parameters must, however, be supplied for the camera:

- The emissivity of the object
- The reflected apparent temperature
- The distance between the object and the camera
- The relative humidity
- Temperature of the atmosphere

17.2 *Emissivity*

The most important object parameter to set correctly is the emissivity which, in short, is a measure of how much radiation is emitted from the object, compared to that from a perfect blackbody of the same temperature.

Normally, object materials and surface treatments exhibit emissivity ranging from approximately 0.1 to 0.95. A highly polished (mirror) surface falls below 0.1, while an oxidized or painted surface has a higher emissivity. Oil-based paint, regardless of color in the visible spectrum, has an emissivity over 0.9 in the infrared. Human skin exhibits an emissivity 0.97 to 0.98.

Non-oxidized metals represent an extreme case of perfect opacity and high reflexivity, which does not vary greatly with wavelength. Consequently, the emissivity of metals is low – only increasing with temperature. For non-metals, emissivity tends to be high, and decreases with temperature.

17.2.1 Finding the emissivity of a sample

17.2.1.1 Step 1: Determining reflected apparent temperature

Use one of the following two methods to determine reflected apparent temperature:

17.2.1.1.1 Method 1: Direct method

- 1 Look for possible reflection sources, considering that the incident angle = reflection angle ($a = b$).

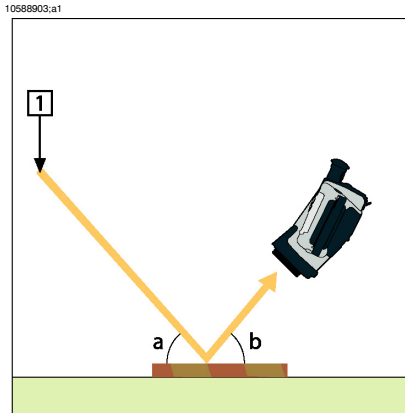


Figure 17.1 1 = Reflection source

- 2 If the reflection source is a spot source, modify the source by obstructing it using a piece of cardboard.

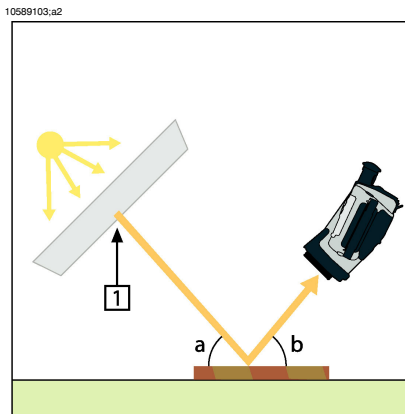


Figure 17.2 1 = Reflection source

- 3 Measure the radiation intensity (= apparent temperature) from the reflecting source using the following settings:

- Emissivity: 1.0
- D_{obj} : 0

You can measure the radiation intensity using one of the following two methods:

10589003;a2

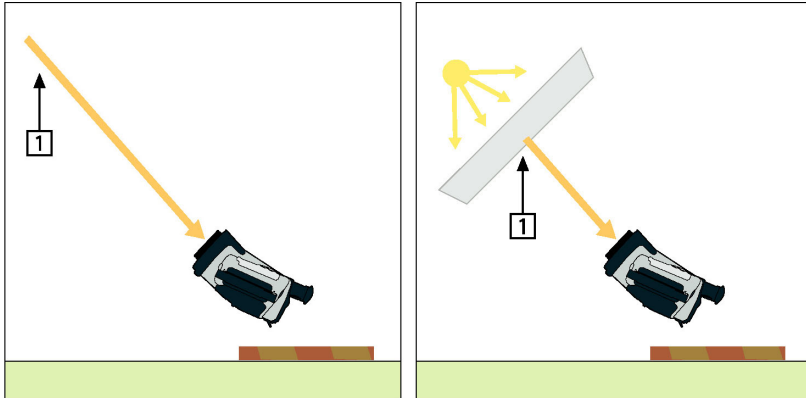


Figure 17.3 1 = Reflection source

Note: Using a thermocouple to measure reflected apparent temperature is not recommended for two important reasons:

- A thermocouple does not measure radiation intensity
- A thermocouple requires a very good thermal contact to the surface, usually by gluing and covering the sensor by a thermal isolator.

17.2.1.1.2 Method 2: Reflector method

1	Crumble up a large piece of aluminum foil.
2	Uncrumble the aluminum foil and attach it to a piece of cardboard of the same size.
3	Put the piece of cardboard in front of the object you want to measure. Make sure that the side with aluminum foil points to the camera.
4	Set the emissivity to 1.0.

- 5 Measure the apparent temperature of the aluminum foil and write it down.

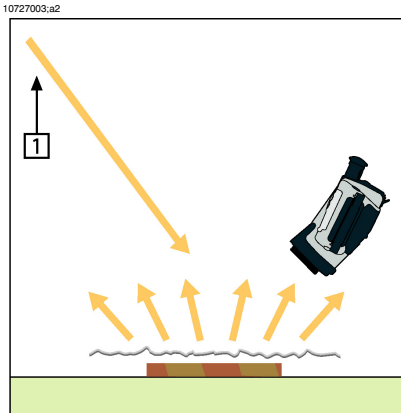


Figure 17.4 Measuring the apparent temperature of the aluminum foil

17.2.1.2 Step 2: Determining the emissivity

1	Select a place to put the sample.
2	Determine and set reflected apparent temperature according to the previous procedure.
3	Put a piece of electrical tape with known high emissivity on the sample.
4	Heat the sample at least 20 K above room temperature. Heating must be reasonably even.
5	Focus and auto-adjust the camera, and freeze the image.
6	Adjust Level and Span for best image brightness and contrast.
7	Set emissivity to that of the tape (usually 0.97).
8	Measure the temperature of the tape using one of the following measurement functions: <ul style="list-style-type: none"> ■ Isotherm (helps you to determine both the temperature and how evenly you have heated the sample) ■ Spot (simpler) ■ Box Avg (good for surfaces with varying emissivity).
9	Write down the temperature.
10	Move your measurement function to the sample surface.
11	Change the emissivity setting until you read the same temperature as your previous measurement.
12	Write down the emissivity.

Note:

- Avoid forced convection
- Look for a thermally stable surrounding that will not generate spot reflections
- Use high quality tape that you know is not transparent, and has a high emissivity you are certain of
- This method assumes that the temperature of your tape and the sample surface are the same. If they are not, your emissivity measurement will be wrong.

17.3 *Reflected apparent temperature*

This parameter is used to compensate for the radiation reflected in the object. If the emissivity is low and the object temperature relatively far from that of the reflected it will be important to set and compensate for the reflected apparent temperature correctly.

17.4 *Distance*

The distance is the distance between the object and the front lens of the camera. This parameter is used to compensate for the following two facts:

- That radiation from the target is absorbed by the atmosphere between the object and the camera.
- That radiation from the atmosphere itself is detected by the camera.

17.5 *Relative humidity*

The camera can also compensate for the fact that the transmittance is also dependent on the relative humidity of the atmosphere. To do this set the relative humidity to the correct value. For short distances and normal humidity the relative humidity can normally be left at a default value of 50%.

17.6 *Other parameters*

In addition, some cameras and analysis programs from FLIR Systems allow you to compensate for the following parameters:

- Atmospheric temperature – *i.e.* the temperature of the atmosphere between the camera and the target
- External optics temperature – *i.e.* the temperature of any external lenses or windows used in front of the camera
- External optics transmission – *i.e.* the transmission of any external lenses or windows used in front of the camera

INTENTIONALLY LEFT BLANK

18 History of infrared technology

Less than 200 years ago the existence of the infrared portion of the electromagnetic spectrum wasn't even suspected. The original significance of the infrared spectrum, or simply 'the infrared' as it is often called, as a form of heat radiation is perhaps less obvious today than it was at the time of its discovery by Herschel in 1800.

18

10386703.a1

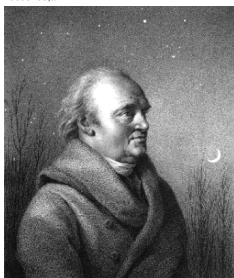


Figure 18.1 Sir William Herschel (1738–1822)

The discovery was made accidentally during the search for a new optical material. Sir William Herschel—Royal Astronomer to King George III of England, and already famous for his discovery of the planet Uranus—was searching for an optical filter material to reduce the brightness of the sun's image in telescopes during solar observations. While testing different samples of colored glass that gave similar reductions in brightness, he was intrigued to find that some of the samples passed very little of the sun's heat, while others passed so much heat that he risked eye damage after only a few seconds' observation.

Herschel was soon convinced of the necessity of setting up a systematic experiment, with the objective of finding a single material that would give the desired reduction in brightness as well as the maximum reduction in heat. He began the experiment by repeating Newton's prism experiment, but looking for the heating effect rather than the visual distribution of intensity in the spectrum. He first blackened the bulb of a sensitive mercury-in-glass thermometer with ink, and with this as his radiation detector he proceeded to test the heating effect of the various colors of the spectrum formed on the top of a table by passing sunlight through a glass prism. Other thermometers, placed outside the sun's rays, served as controls.

As the blackened thermometer was moved slowly along the colors of the spectrum, the temperature readings showed a steady increase from the violet end to the red end. This was not entirely unexpected, since the Italian researcher Landriani, in a similar experiment in 1777, had observed much the same effect. It was Herschel,

however, who was the first to recognize that there must be a point where the heating effect reaches a maximum, and that measurements confined to the visible portion of the spectrum failed to locate this point.

10388903.a1



Figure 18.2 Marsilio Landriani (1746–1815)

Moving the thermometer into the dark region beyond the red end of the spectrum, Herschel confirmed that the heating effect continued to increase. The maximum point, when he found it, lay well beyond the red end—in what is known today as the ‘infrared wavelengths.’

When Herschel revealed his discovery, he referred to this new portion of the electromagnetic spectrum as the ‘thermometrical spectrum.’ The radiation itself he sometimes referred to as ‘dark heat,’ or simply ‘the invisible rays.’ Ironically, and contrary to popular opinion, it wasn’t Herschel who originated the term ‘infrared.’ The word only began to appear in print around 75 years later, and it is still unclear who should receive credit as the originator.

Herschel’s use of glass in the prism of his original experiment led to some early controversies with his contemporaries about the actual existence of the infrared wavelengths. Different investigators, in attempting to confirm his work, used various types of glass indiscriminately, having different transparencies in the infrared. Through his later experiments, Herschel was aware of the limited transparency of glass to the newly discovered thermal radiation, and he was forced to conclude that optics for the infrared would probably be restricted to the use of reflective elements exclusively (i.e., plane and curved mirrors). Fortunately, this proved to be true only until 1830, when the Italian investigator Melloni made his great discovery that naturally occurring rock salt (NaCl)—which was available in large enough crystals to be made into lenses and prisms—is remarkably transparent to the infrared. The result was that rock salt became the principal infrared optical material, and remained so for the next century, until the art of synthetic crystal growing was mastered in the 1930s.

10399103.a1



Figure 18.3 Macedonio Melloni (1798–1854)

Thermometers, as radiation detectors, remained unchallenged until 1829, the year Nobili invented the thermocouple. (Herschel's own thermometer could be read to 0.2°C (0.036°F), and later models were able to be read to 0.05°C (0.09°F).) Then a breakthrough occurred: Melloni connected a number of thermocouples in series to form the first thermopile. The new device was at least 40 times as sensitive as the best thermometer of the day for detecting heat radiation—capable of detecting the heat from a person standing 3 meters (10 ft.) away.

The first so-called 'heat-picture' became possible in 1840, the result of work by Sir John Herschel, son of the discoverer of the infrared and a famous astronomer in his own right. Based upon the differential evaporation of a thin film of oil when exposed to a heat pattern focused upon it, the thermal image could be seen by reflected light where the interference effects of the oil film made the image visible to the eye. John Herschel also managed to obtain a primitive record of the thermal image on paper, which he called a 'thermograph.'

10399003.a2



Figure 18.4 Samuel P. Langley (1834–1906)

The improvement of infrared-detector sensitivity progressed slowly. Another major breakthrough, made by Langley in 1880, was the invention of the bolometer. This consisted of a thin blackened strip of platinum connected in one arm of a Wheatstone bridge circuit upon which the infrared radiation was focused and to which a sensitive galvanometer responded. This instrument is said to have been able to detect the heat from a cow at a distance of 400 meters (1311 ft.).

An English scientist, Sir James Dewar, first introduced the use of liquefied gases as cooling agents (such as liquid nitrogen with a temperature of -196°C (-320.8°F)) in low-temperature research. In 1892 he invented a unique vacuum insulating container in which it was possible to store liquefied gases for entire days. The common ‘thermos flask’, used for storing hot and cold drinks, is based upon his invention.

Between the years 1900 and 1920, the inventors of the world ‘discovered’ the infrared. Many patents were issued for devices to detect personnel, artillery, aircraft, ships—and even icebergs. The first operating systems, in the modern sense, began to be developed during the 1914–18 war, when both sides had research programs devoted to the military exploitation of the infrared. These programs included experimental systems for enemy intrusion/detection, remote temperature sensing, secure communications, and ‘flying torpedo’ guidance. An infrared search system tested during this period was able to detect an approaching airplane at a distance of 1.5 km (0.94 miles), or a person more than 300 meters (984 ft.) away.

The most sensitive systems up to this time were all based upon variations of the bolometer idea, but the period between the two world wars saw the development of two revolutionary new infrared detectors: the image converter and the photon detector. At first, the image converter received the greatest attention by the military, because it enabled an observer for the first time in history to literally ‘see in the dark.’ However, the sensitivity of the image converter was limited to the near-infrared wavelengths, and the most interesting military targets (i.e. enemy soldiers) had to be illuminated by infrared search beams. Since this involved the risk of giving away the observer’s position to a similarly equipped enemy observer, it is understandable that military interest in the image converter eventually faded.

The tactical military disadvantages of so-called ‘active’ (i.e. search beam-equipped) thermal-imaging systems provided impetus following the 1939–45 war for extensive secret military infrared-research programs into the possibilities of developing ‘passive’ (no search beam) systems based around the extremely sensitive photon detector. During this period, military secrecy prevented disclosure of the status of infrared-imaging technology. This secrecy only began to be lifted in the middle of the 1950s, and viable thermal-imaging devices finally began to be available to civilian science and industry.

19 Theory of thermography

19.1 Introduction

The subjects of infrared radiation and the related technique of thermography are still new to many who will use an infrared camera. In this section the theory behind thermography will be given.

19.2 The electromagnetic spectrum

The electromagnetic spectrum is divided arbitrarily into a number of wavelength regions, called *bands*, distinguished by the methods used to produce and detect the radiation. There is no fundamental difference between radiation in the different bands of the electromagnetic spectrum. They are all governed by the same laws and the only differences are those due to differences in wavelength.

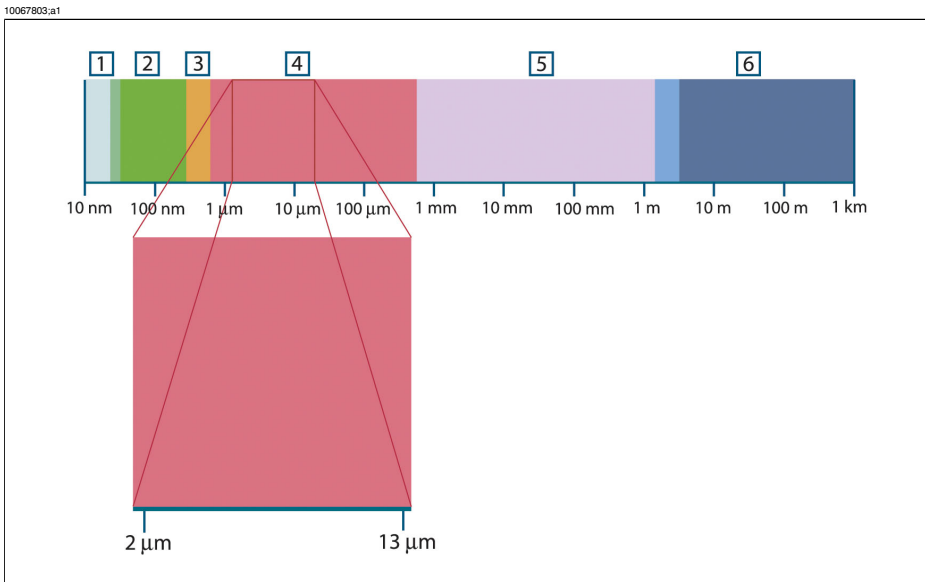


Figure 19.1 The electromagnetic spectrum. 1: X-ray; 2: UV; 3: Visible; 4: IR; 5: Microwaves; 6: Radiowaves.

Thermography makes use of the infrared spectral band. At the short-wavelength end the boundary lies at the limit of visual perception, in the deep red. At the long-wavelength end it merges with the microwave radio wavelengths, in the millimeter range.

The infrared band is often further subdivided into four smaller bands, the boundaries of which are also arbitrarily chosen. They include: the *near infrared* (0.75–3 μm), the *middle infrared* (3–6 μm), the *far infrared* (6–15 μm) and the *extreme infrared* (15–100

μm). Although the wavelengths are given in μm (micrometers), other units are often still used to measure wavelength in this spectral region, e.g. nanometer (nm) and Ångström (Å).

The relationships between the different wavelength measurements is:

$$10\,000\text{ Å} = 1\,000\text{ nm} = 1\text{ }\mu = 1\text{ }\mu\text{m}$$

19.3 Blackbody radiation

19

A blackbody is defined as an object which absorbs all radiation that impinges on it at any wavelength. The apparent misnomer *black* relating to an object emitting radiation is explained by Kirchhoff's Law (after *Gustav Robert Kirchhoff*, 1824–1887), which states that a body capable of absorbing all radiation at any wavelength is equally capable in the emission of radiation.

10386803.a1

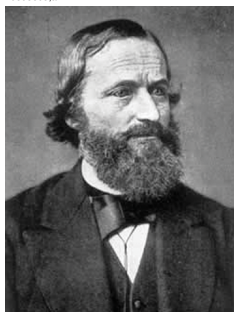


Figure 19.2 Gustav Robert Kirchhoff (1824–1887)

The construction of a blackbody source is, in principle, very simple. The radiation characteristics of an aperture in an isotherm cavity made of an opaque absorbing material represents almost exactly the properties of a blackbody. A practical application of the principle to the construction of a perfect absorber of radiation consists of a box that is light tight except for an aperture in one of the sides. Any radiation which then enters the hole is scattered and absorbed by repeated reflections so only an infinitesimal fraction can possibly escape. The blackness which is obtained at the aperture is nearly equal to a blackbody and almost perfect for all wavelengths.

By providing such an isothermal cavity with a suitable heater it becomes what is termed a *cavity radiator*. An isothermal cavity heated to a uniform temperature generates blackbody radiation, the characteristics of which are determined solely by the temperature of the cavity. Such cavity radiators are commonly used as sources of radiation in temperature reference standards in the laboratory for calibrating thermographic instruments, such as a FLIR Systems camera for example.

If the temperature of blackbody radiation increases to more than 525°C (977°F), the source begins to be visible so that it appears to the eye no longer black. This is the incipient red heat temperature of the radiator, which then becomes orange or yellow as the temperature increases further. In fact, the definition of the so-called *color temperature* of an object is the temperature to which a blackbody would have to be heated to have the same appearance.

Now consider three expressions that describe the radiation emitted from a blackbody.

19.3.1 Planck's law

10389203,a1



Figure 19.3 Max Planck (1858–1947)

Max Planck (1858–1947) was able to describe the spectral distribution of the radiation from a blackbody by means of the following formula:

$$W_{\lambda b} = \frac{2\pi hc^2}{\lambda^5 \left(e^{\frac{hc}{\lambda kT}} - 1 \right)} \times 10^{-6} [\text{Watt} / \text{m}^2, \mu\text{m}]$$

where:

$W_{\lambda b}$	Blackbody spectral radiant emittance at wavelength λ .
c	Velocity of light = 3×10^8 m/s
h	Planck's constant = 6.6×10^{-34} Joule sec.
k	Boltzmann's constant = 1.4×10^{-23} Joule/K.
T	Absolute temperature (K) of a blackbody.
λ	Wavelength (μm).

☞ The factor 10^{-6} is used since spectral emittance in the curves is expressed in $\text{Watt/m}^2, \mu\text{m}$.

Planck's formula, when plotted graphically for various temperatures, produces a family of curves. Following any particular Planck curve, the spectral emittance is zero at $\lambda = 0$, then increases rapidly to a maximum at a wavelength λ_{max} and after passing it approaches zero again at very long wavelengths. The higher the temperature, the shorter the wavelength at which maximum occurs.

10327103,a4

19

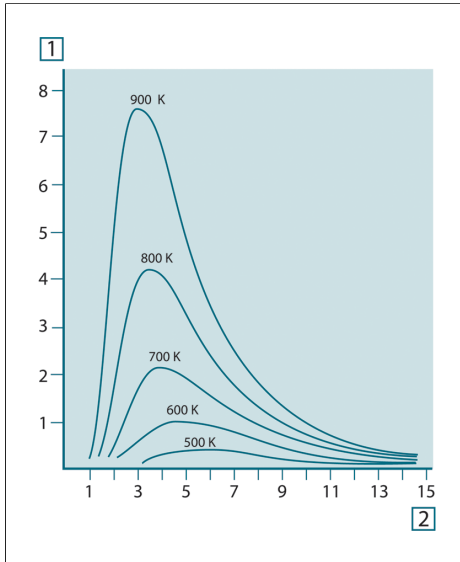


Figure 19.4 Blackbody spectral radiant emittance according to Planck's law, plotted for various absolute temperatures. **1:** Spectral radiant emittance ($\text{W/cm}^2 \times 10^3(\mu\text{m})$); **2:** Wavelength (μm)

19.3.2 Wien's displacement law

By differentiating Planck's formula with respect to λ , and finding the maximum, we have:

$$\lambda_{\text{max}} = \frac{2898}{T} [\mu\text{m}]$$

This is Wien's formula (after *Wilhelm Wien*, 1864–1928), which expresses mathematically the common observation that colors vary from red to orange or yellow as the temperature of a thermal radiator increases. The wavelength of the color is the same as the wavelength calculated for λ_{max} . A good approximation of the value of λ_{max} for a given blackbody temperature is obtained by applying the rule-of-thumb $3\,000/T$

μm . Thus, a very hot star such as Sirius (11 000 K), emitting bluish-white light, radiates with the peak of spectral radiant emittance occurring within the invisible ultraviolet spectrum, at wavelength $0.27 \mu\text{m}$.

10399403.a1

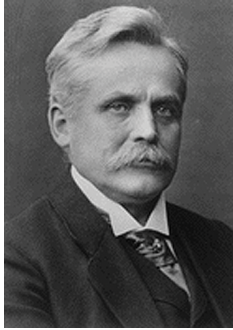


Figure 19.5 Wilhelm Wien (1864–1928)

The sun (approx. 6 000 K) emits yellow light, peaking at about $0.5 \mu\text{m}$ in the middle of the visible light spectrum.

At room temperature (300 K) the peak of radiant emittance lies at $9.7 \mu\text{m}$, in the far infrared, while at the temperature of liquid nitrogen (77 K) the maximum of the almost insignificant amount of radiant emittance occurs at $38 \mu\text{m}$, in the extreme infrared wavelengths.

10327203.a4

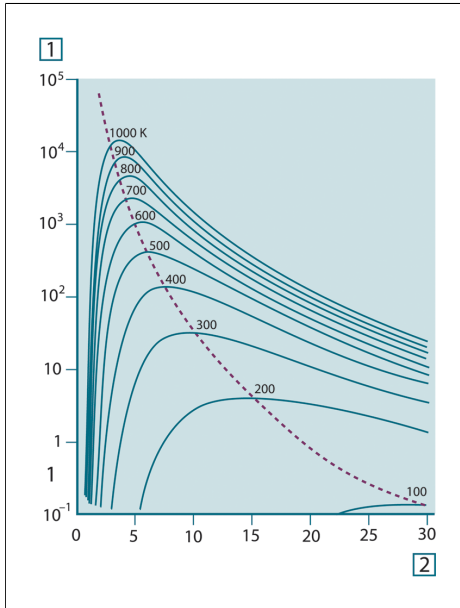


Figure 19.6 Planckian curves plotted on semi-log scales from 100 K to 1000 K. The dotted line represents the locus of maximum radiant emittance at each temperature as described by Wien's displacement law. 1: Spectral radiant emittance ($\text{W}/\text{cm}^2 (\mu\text{m})$); 2: Wavelength (μm).

19.3.3 Stefan-Boltzmann's law

By integrating Planck's formula from $\lambda = 0$ to $\lambda = \infty$, we obtain the total radiant emittance (W_b) of a blackbody:

$$W_b = \sigma T^4 \quad [\text{Watt}/\text{m}^2]$$

This is the Stefan-Boltzmann formula (after *Josef Stefan*, 1835–1893, and *Ludwig Boltzmann*, 1844–1906), which states that the total emissive power of a blackbody is proportional to the fourth power of its absolute temperature. Graphically, W_b represents the area below the Planck curve for a particular temperature. It can be shown that the radiant emittance in the interval $\lambda = 0$ to λ_{max} is only 25% of the total, which represents about the amount of the sun's radiation which lies inside the visible light spectrum.

10399303.a1



Figure 19.7 Josef Stefan (1835–1893), and Ludwig Boltzmann (1844–1906)

19

Using the Stefan-Boltzmann formula to calculate the power radiated by the human body, at a temperature of 300 K and an external surface area of approx. 2 m², we obtain 1 kW. This power loss could not be sustained if it were not for the compensating absorption of radiation from surrounding surfaces, at room temperatures which do not vary too drastically from the temperature of the body – or, of course, the addition of clothing.

19.3.4 Non-blackbody emitters

So far, only blackbody radiators and blackbody radiation have been discussed. However, real objects almost never comply with these laws over an extended wavelength region – although they may approach the blackbody behavior in certain spectral intervals. For example, a certain type of white paint may appear perfectly *white* in the visible light spectrum, but becomes distinctly *gray* at about 2 μm, and beyond 3 μm it is almost *black*.

There are three processes which can occur that prevent a real object from acting like a blackbody: a fraction of the incident radiation α may be absorbed, a fraction ρ may be reflected, and a fraction τ may be transmitted. Since all of these factors are more or less wavelength dependent, the subscript λ is used to imply the spectral dependence of their definitions. Thus:

- The spectral absorptance α_λ = the ratio of the spectral radiant power absorbed by an object to that incident upon it.
- The spectral reflectance ρ_λ = the ratio of the spectral radiant power reflected by an object to that incident upon it.
- The spectral transmittance τ_λ = the ratio of the spectral radiant power transmitted through an object to that incident upon it.

The sum of these three factors must always add up to the whole at any wavelength, so we have the relation:

$$\alpha_\lambda + \rho_\lambda + \tau_\lambda = 1$$

For opaque materials $\tau_\lambda = 0$ and the relation simplifies to:

$$\alpha_\lambda + \rho_\lambda = 1$$

Another factor, called the emissivity, is required to describe the fraction ε of the radiant emittance of a blackbody produced by an object at a specific temperature. Thus, we have the definition:

The spectral emissivity ε_λ = the ratio of the spectral radiant power from an object to that from a blackbody at the same temperature and wavelength.

Expressed mathematically, this can be written as the ratio of the spectral emittance of the object to that of a blackbody as follows:

$$\varepsilon_\lambda = \frac{W_{\lambda o}}{W_{\lambda b}}$$

Generally speaking, there are three types of radiation source, distinguished by the ways in which the spectral emittance of each varies with wavelength.

- A blackbody, for which $\varepsilon_\lambda = \varepsilon = 1$
- A graybody, for which $\varepsilon_\lambda = \varepsilon = \text{constant less than 1}$
- A selective radiator, for which ε varies with wavelength

According to Kirchhoff's law, for any material the spectral emissivity and spectral absorptance of a body are equal at any specified temperature and wavelength. That is:

$$\varepsilon_\lambda = \alpha_\lambda$$

From this we obtain, for an opaque material (since $\alpha_\lambda + \rho_\lambda = 1$):

$$\varepsilon_\lambda + \rho_\lambda = 1$$

For highly polished materials ε_λ approaches zero, so that for a perfectly reflecting material (*i.e.* a perfect mirror) we have:

$$\rho_\lambda = 1$$

For a graybody radiator, the Stefan-Boltzmann formula becomes:

$$W = \varepsilon \sigma T^4 \text{ [Watt/m}^2\text{]}$$

This states that the total emissive power of a graybody is the same as a blackbody at the same temperature reduced in proportion to the value of ε from the graybody.

10401203.a2

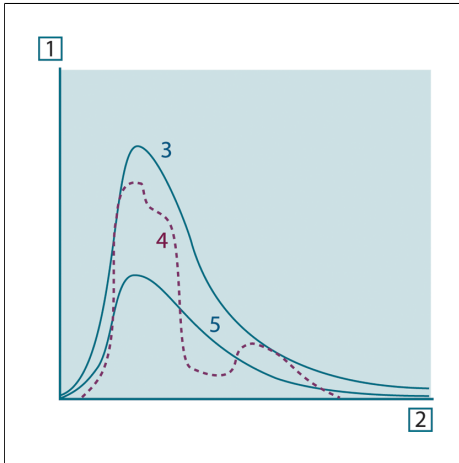


Figure 19.8 Spectral radiant emittance of three types of radiators. 1: Spectral radiant emittance; 2: Wavelength; 3: Blackbody; 4: Selective radiator; 5: Graybody.

10327303.a4

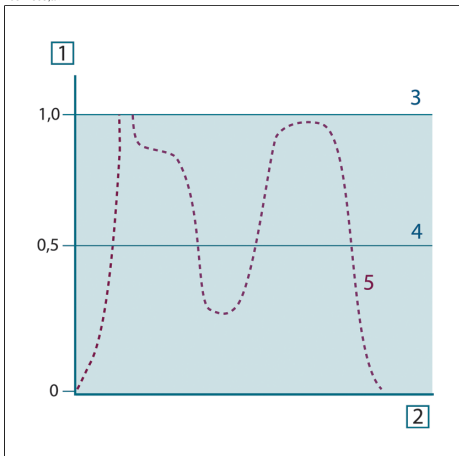


Figure 19.9 Spectral emissivity of three types of radiators. 1: Spectral emissivity; 2: Wavelength; 3: Blackbody; 4: Graybody; 5: Selective radiator.

19.4 Infrared semi-transparent materials

Consider now a non-metallic, semi-transparent body – let us say, in the form of a thick flat plate of plastic material. When the plate is heated, radiation generated within its volume must work its way toward the surfaces through the material in which it is partially absorbed. Moreover, when it arrives at the surface, some of it is reflected back into the interior. The back-reflected radiation is again partially absorbed, but

some of it arrives at the other surface, through which most of it escapes; part of it is reflected back again. Although the progressive reflections become weaker and weaker they must all be added up when the total emittance of the plate is sought. When the resulting geometrical series is summed, the effective emissivity of a semi-transparent plate is obtained as:

$$\varepsilon_{\lambda} = \frac{(1 - \rho_{\lambda})(1 - \tau_{\lambda})}{1 - \rho_{\lambda}\tau_{\lambda}}$$

19 When the plate becomes opaque this formula is reduced to the single formula:

$$\varepsilon_{\lambda} = 1 - \rho_{\lambda}$$

This last relation is a particularly convenient one, because it is often easier to measure reflectance than to measure emissivity directly.

20 The measurement formula

As already mentioned, when viewing an object, the camera receives radiation not only from the object itself. It also collects radiation from the surroundings reflected via the object surface. Both these radiation contributions become attenuated to some extent by the atmosphere in the measurement path. To this comes a third radiation contribution from the atmosphere itself.

This description of the measurement situation, as illustrated in the figure below, is so far a fairly true description of the real conditions. What has been neglected could for instance be sun light scattering in the atmosphere or stray radiation from intense radiation sources outside the field of view. Such disturbances are difficult to quantify, however, in most cases they are fortunately small enough to be neglected. In case they are not negligible, the measurement configuration is likely to be such that the risk for disturbance is obvious, at least to a trained operator. It is then his responsibility to modify the measurement situation to avoid the disturbance e.g. by changing the viewing direction, shielding off intense radiation sources etc.

Accepting the description above, we can use the figure below to derive a formula for the calculation of the object temperature from the calibrated camera output.

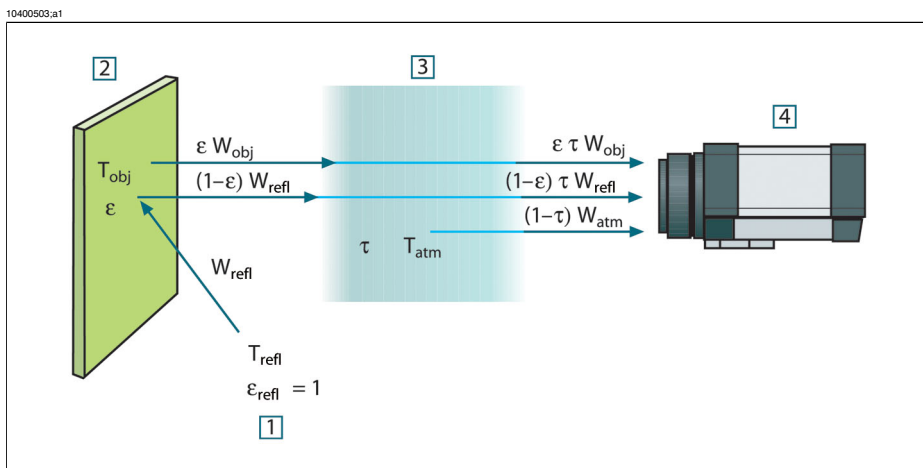


Figure 20.1 A schematic representation of the general thermographic measurement situation. 1: Surroundings; 2: Object; 3: Atmosphere; 4: Camera

Assume that the received radiation power W from a blackbody source of temperature T_{source} on short distance generates a camera output signal U_{source} that is proportional to the power input (power linear camera). We can then write (Equation 1):

$$U_{source} = CW(T_{source})$$

or, with simplified notation:

$$U_{source} = CW_{source}$$

where C is a constant.

Should the source be a graybody with emittance ε , the received radiation would consequently be εW_{source} .

We are now ready to write the three collected radiation power terms:

1 – *Emission from the object* = $\varepsilon \tau W_{obj}$, where ε is the emittance of the object and τ is the transmittance of the atmosphere. The object temperature is T_{obj} .

2 – *Reflected emission from ambient sources* = $(1 - \varepsilon) \tau W_{refl}$, where $(1 - \varepsilon)$ is the reflectance of the object. The ambient sources have the temperature T_{refl} .

It has here been assumed that the temperature T_{refl} is the same for all emitting surfaces within the halfsphere seen from a point on the object surface. This is of course sometimes a simplification of the true situation. It is, however, a necessary simplification in order to derive a workable formula, and T_{refl} can – at least theoretically – be given a value that represents an efficient temperature of a complex surrounding.

Note also that we have assumed that the emittance for the surroundings = 1. This is correct in accordance with Kirchhoff's law: All radiation impinging on the surrounding surfaces will eventually be absorbed by the same surfaces. Thus the emittance = 1. (Note though that the latest discussion requires the complete sphere around the object to be considered.)

3 – *Emission from the atmosphere* = $(1 - \tau) W_{atm}$, where $(1 - \tau)$ is the emittance of the atmosphere. The temperature of the atmosphere is T_{atm} .

The total received radiation power can now be written (Equation 2):

$$W_{tot} = \varepsilon \tau W_{obj} + (1 - \varepsilon) \tau W_{refl} + (1 - \tau) W_{atm}$$

We multiply each term by the constant C of Equation 1 and replace the CW products by the corresponding U according to the same equation, and get (Equation 3):

$$U_{tot} = \varepsilon \tau U_{obj} + (1 - \varepsilon) \tau U_{refl} + (1 - \tau) U_{atm}$$

Solve Equation 3 for U_{obj} (Equation 4):

$$U_{obj} = \frac{1}{\varepsilon\tau} U_{tot} - \frac{1-\varepsilon}{\varepsilon} U_{refl} - \frac{1-\tau}{\varepsilon\tau} U_{atm}$$

This is the general measurement formula used in all the FLIR Systems thermographic equipment. The voltages of the formula are:

Figure 20.2 Voltages

U_{obj}	Calculated camera output voltage for a blackbody of temperature T_{obj} i.e. a voltage that can be directly converted into true requested object temperature.
U_{tot}	Measured camera output voltage for the actual case.
U_{refl}	Theoretical camera output voltage for a blackbody of temperature T_{refl} according to the calibration.
U_{atm}	Theoretical camera output voltage for a blackbody of temperature T_{atm} according to the calibration.

20

The operator has to supply a number of parameter values for the calculation:

- the object emittance ε ,
- the relative humidity,
- T_{atm}
- object distance (D_{obj})
- the (effective) temperature of the object surroundings, or the reflected ambient temperature T_{refl} , and
- the temperature of the atmosphere T_{atm}

This task could sometimes be a heavy burden for the operator since there are normally no easy ways to find accurate values of emittance and atmospheric transmittance for the actual case. The two temperatures are normally less of a problem provided the surroundings do not contain large and intense radiation sources.

A natural question in this connection is: How important is it to know the right values of these parameters? It could though be of interest to get a feeling for this problem already here by looking into some different measurement cases and compare the relative magnitudes of the three radiation terms. This will give indications about when it is important to use correct values of which parameters.

The figures below illustrates the relative magnitudes of the three radiation contributions for three different object temperatures, two emittances, and two spectral ranges: SW and LW. Remaining parameters have the following fixed values:

- $\tau = 0.88$
- $T_{refl} = +20^{\circ}\text{C} (+68^{\circ}\text{F})$
- $T_{atm} = +20^{\circ}\text{C} (+68^{\circ}\text{F})$

It is obvious that measurement of low object temperatures are more critical than measuring high temperatures since the 'disturbing' radiation sources are relatively much stronger in the first case. Should also the object emittance be low, the situation would be still more difficult.

We have finally to answer a question about the importance of being allowed to use the calibration curve above the highest calibration point, what we call extrapolation. Imagine that we in a certain case measure $U_{\text{tot}} = 4.5$ volts. The highest calibration point for the camera was in the order of 4.1 volts, a value unknown to the operator. Thus, even if the object happened to be a blackbody, i.e. $U_{\text{obj}} = U_{\text{tot}}$, we are actually performing extrapolation of the calibration curve when converting 4.5 volts into temperature.

20

Let us now assume that the object is not black, it has an emittance of 0.75, and the transmittance is 0.92. We also assume that the two second terms of Equation 4 amount to 0.5 volts together. Computation of U_{obj} by means of Equation 4 then results in $U_{\text{obj}} = 4.5 / 0.75 / 0.92 - 0.5 = 6.0$. This is a rather extreme extrapolation, particularly when considering that the video amplifier might limit the output to 5 volts! Note, though, that the application of the calibration curve is a theoretical procedure where no electronic or other limitations exist. We trust that if there had been no signal limitations in the camera, and if it had been calibrated far beyond 5 volts, the resulting curve would have been very much the same as our real curve extrapolated beyond 4.1 volts, provided the calibration algorithm is based on radiation physics, like the FLIR Systems algorithm. Of course there must be a limit to such extrapolations.

10400603.a2

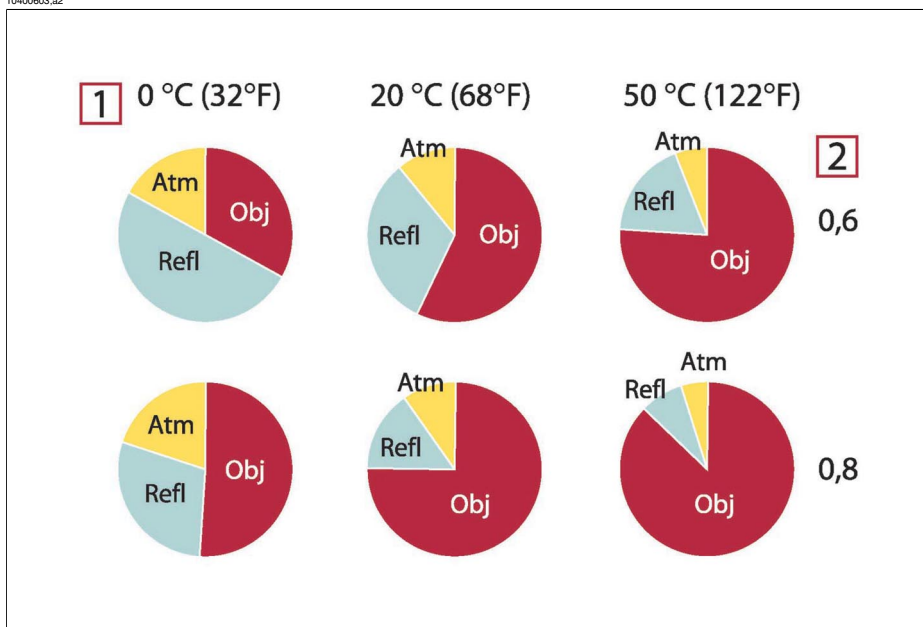


Figure 20.3 Relative magnitudes of radiation sources under varying measurement conditions (SW camera). 1: Object temperature; 2: Emissance; **Obj**: Object radiation; **Refl**: Reflected radiation; **Atm**: atmosphere radiation. Fixed parameters: $\tau = 0.88$; $T_{\text{refl}} = 20^{\circ}\text{C}$ (+68°F); $T_{\text{atm}} = 20^{\circ}\text{C}$ (+68°F).

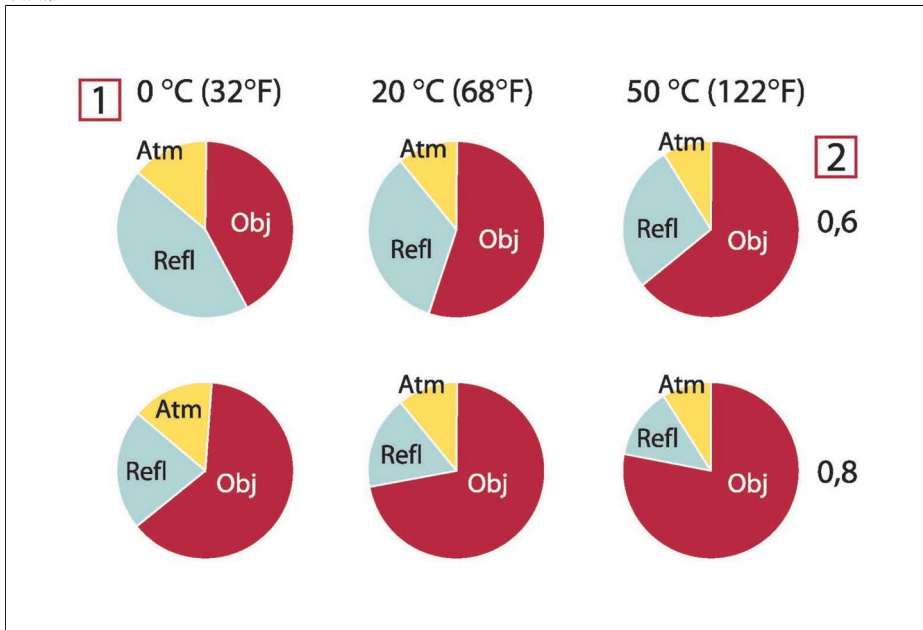


Figure 20.4 Relative magnitudes of radiation sources under varying measurement conditions (LW camera). **1**: Object temperature; **2**: Emittance; **Obj**: Object radiation; **Refl**: Reflected radiation; **Atm**: atmosphere radiation. Fixed parameters: $\tau = 0.88$; $T_{\text{refl}} = 20^{\circ}\text{C}$ (+68°F); $T_{\text{atm}} = 20^{\circ}\text{C}$ (+68°F).

21 Emissivity tables

This section presents a compilation of emissivity data from the infrared literature and measurements made by FLIR Systems.

21.1 References

1	Mikaél A. Bramson: <i>Infrared Radiation, A Handbook for Applications</i> , Plenum press, N.Y.
2	William L. Wolfe, George J. Zissis: <i>The Infrared Handbook</i> , Office of Naval Research, Department of Navy, Washington, D.C.
3	Madding, R. P.: <i>Thermographic Instruments and systems</i> . Madison, Wisconsin: University of Wisconsin – Extension, Department of Engineering and Applied Science.
4	William L. Wolfe: <i>Handbook of Military Infrared Technology</i> , Office of Naval Research, Department of Navy, Washington, D.C.
5	Jones, Smith, Probert: <i>External thermography of buildings...</i> , Proc. of the Society of Photo-Optical Instrumentation Engineers, vol.110, Industrial and Civil Applications of Infrared Technology, June 1977 London.
6	Paljak, Pettersson: <i>Thermography of Buildings</i> , Swedish Building Research Institute, Stockholm 1972.
7	Vlcek, J.: <i>Determination of emissivity with imaging radiometers and some emissivities at $\lambda = 5 \mu\text{m}$</i> . Photogrammetric Engineering and Remote Sensing.
8	Kern: <i>Evaluation of infrared emission of clouds and ground as measured by weather satellites</i> , Defence Documentation Center, AD 617 417.
9	Öhman, Claes: <i>Emittansmätningar med AGEMA E-Box</i> . Teknisk rapport, AGEMA 1999. (Emittance measurements using AGEMA E-Box. Technical report, AGEMA 1999.)

21

21.2 Important note about the emissivity tables

The emissivity values in the table below are recorded using a shortwave (SW) camera. The values should be regarded as recommendations only and used by caution.

21.3 Tables

Figure 21.1 T: Total spectrum; **SW:** 2–5 μm ; **LW:** 8–14 μm , **LLW:** 6.5–20 μm ; **1:** Material; **2:** Specification; **3:** Temperature in $^{\circ}\text{C}$; **4:** Spectrum; **5:** Emissivity; **6:** Reference

1	2	3	4	5	6
Aluminum	anodized, black, dull	70	LW	0.95	9
Aluminum	anodized, black, dull	70	SW	0.67	9

1	2	3	4	5	6
Aluminum	anodized, light gray, dull	70	LW	0.97	9
Aluminum	anodized, light gray, dull	70	SW	0.61	9
Aluminum	anodized sheet	100	T	0.55	2
Aluminum	as received, plate	100	T	0.09	4
Aluminum	as received, sheet	100	T	0.09	2
Aluminum	cast, blast cleaned	70	LW	0.46	9
Aluminum	cast, blast cleaned	70	SW	0.47	9
Aluminum	dipped in HNO ₃ , plate	100	T	0.05	4
Aluminum	foil	27	3 μ m	0.09	3
Aluminum	foil	27	10 μ m	0.04	3
Aluminum	oxidized, strongly	50–500	T	0.2–0.3	1
Aluminum	polished	50–100	T	0.04–0.06	1
Aluminum	polished, sheet	100	T	0.05	2
Aluminum	polished plate	100	T	0.05	4
Aluminum	roughened	27	3 μ m	0.28	3
Aluminum	roughened	27	10 μ m	0.18	3
Aluminum	rough surface	20–50	T	0.06–0.07	1
Aluminum	sheet, 4 samples differently scratched	70	LW	0.03–0.06	9
Aluminum	sheet, 4 samples differently scratched	70	SW	0.05–0.08	9
Aluminum	vacuum deposited	20	T	0.04	2
Aluminum	weathered, heavily	17	SW	0.83–0.94	5
Aluminum bronze		20	T	0.60	1
Aluminum hydroxide	powder		T	0.28	1
Aluminum oxide	activated, powder		T	0.46	1

1	2	3	4	5	6
Aluminum oxide	pure, powder (alumina)		T	0.16	1
Asbestos	board	20	T	0.96	1
Asbestos	fabric		T	0.78	1
Asbestos	floor tile	35	SW	0.94	7
Asbestos	paper	40–400	T	0.93–0.95	1
Asbestos	powder		T	0.40–0.60	1
Asbestos	slate	20	T	0.96	1
Asphalt paving		4	LLW	0.967	8
Brass	dull, tarnished	20–350	T	0.22	1
Brass	oxidized	70	SW	0.04–0.09	9
Brass	oxidized	70	LW	0.03–0.07	9
Brass	oxidized	100	T	0.61	2
Brass	oxidized at 600°C	200–600	T	0.59–0.61	1
Brass	polished	200	T	0.03	1
Brass	polished, highly	100	T	0.03	2
Brass	rubbed with 80-grit emery	20	T	0.20	2
Brass	sheet, rolled	20	T	0.06	1
Brass	sheet, worked with emery	20	T	0.2	1
Brick	alumina	17	SW	0.68	5
Brick	common	17	SW	0.86–0.81	5
Brick	Dinas silica, glazed, rough	1100	T	0.85	1
Brick	Dinas silica, refractory	1000	T	0.66	1
Brick	Dinas silica, unglazed, rough	1000	T	0.80	1
Brick	firebrick	17	SW	0.68	5
Brick	fireclay	20	T	0.85	1

1	2	3	4	5	6
Brick	fireclay	1000	T	0.75	1
Brick	fireclay	1200	T	0.59	1
Brick	masonry	35	SW	0.94	7
Brick	masonry, plastered	20	T	0.94	1
Brick	red, common	20	T	0.93	2
Brick	red, rough	20	T	0.88–0.93	1
Brick	refractory, corundum	1000	T	0.46	1
Brick	refractory, magnesite	1000–1300	T	0.38	1
Brick	refractory, strongly radiating	500–1000	T	0.8–0.9	1
Brick	refractory, weakly radiating	500–1000	T	0.65–0.75	1
Brick	silica, 95% SiO ₂	1230	T	0.66	1
Brick	sillimanite, 33% SiO ₂ , 64% Al ₂ O ₃	1500	T	0.29	1
Brick	waterproof	17	SW	0.87	5
Bronze	phosphor bronze	70	LW	0.06	9
Bronze	phosphor bronze	70	SW	0.08	9
Bronze	polished	50	T	0.1	1
Bronze	porous, rough	50–150	T	0.55	1
Bronze	powder		T	0.76–0.80	1
Carbon	candle soot	20	T	0.95	2
Carbon	charcoal powder		T	0.96	1
Carbon	graphite, filed surface	20	T	0.98	2
Carbon	graphite powder		T	0.97	1
Carbon	lampblack	20–400	T	0.95–0.97	1
Chipboard	untreated	20	SW	0.90	6

1	2	3	4	5	6
Chromium	polished	50	T	0.10	1
Chromium	polished	500–1000	T	0.28–0.38	1
Clay	fired	70	T	0.91	1
Cloth	black	20	T	0.98	1
Concrete		20	T	0.92	2
Concrete	dry	36	SW	0.95	7
Concrete	rough	17	SW	0.97	5
Concrete	walkway	5	LLW	0.974	8
Copper	commercial, bur-nished	20	T	0.07	1
Copper	electrolytic, careful-ly polished	80	T	0.018	1
Copper	electrolytic, pol-ished	–34	T	0.006	4
Copper	molten	1100–1300	T	0.13–0.15	1
Copper	oxidized	50	T	0.6–0.7	1
Copper	oxidized, black	27	T	0.78	4
Copper	oxidized, heavily	20	T	0.78	2
Copper	oxidized to black-ness		T	0.88	1
Copper	polished	50–100	T	0.02	1
Copper	polished	100	T	0.03	2
Copper	polished, commer-cial	27	T	0.03	4
Copper	polished, mechan-ical	22	T	0.015	4
Copper	pure, carefully prepared surface	22	T	0.008	4
Copper	scraped	27	T	0.07	4
Copper dioxide	powder		T	0.84	1
Copper oxide	red, powder		T	0.70	1

1	2	3	4	5	6
Ebonite			T	0.89	1
Emery	coarse	80	T	0.85	1
Enamel		20	T	0.9	1
Enamel	lacquer	20	T	0.85–0.95	1
Fiber board	hard, untreated	20	SW	0.85	6
Fiber board	masonite	70	LW	0.88	9
Fiber board	masonite	70	SW	0.75	9
Fiber board	particle board	70	LW	0.89	9
Fiber board	particle board	70	SW	0.77	9
Fiber board	porous, untreated	20	SW	0.85	6
Gold	polished	130	T	0.018	1
Gold	polished, carefully	200–600	T	0.02–0.03	1
Gold	polished, highly	100	T	0.02	2
Granite	polished	20	LLW	0.849	8
Granite	rough	21	LLW	0.879	8
Granite	rough, 4 different samples	70	LW	0.77–0.87	9
Granite	rough, 4 different samples	70	SW	0.95–0.97	9
Gypsum		20	T	0.8–0.9	1
Ice: See Water					
Iron, cast	casting	50	T	0.81	1
Iron, cast	ingots	1000	T	0.95	1
Iron, cast	liquid	1300	T	0.28	1
Iron, cast	machined	800–1000	T	0.60–0.70	1
Iron, cast	oxidized	38	T	0.63	4
Iron, cast	oxidized	100	T	0.64	2
Iron, cast	oxidized	260	T	0.66	4
Iron, cast	oxidized	538	T	0.76	4

1	2	3	4	5	6
Iron, cast	oxidized at 600°C	200–600	T	0.64–0.78	1
Iron, cast	polished	38	T	0.21	4
Iron, cast	polished	40	T	0.21	2
Iron, cast	polished	200	T	0.21	1
Iron, cast	unworked	900–1100	T	0.87–0.95	1
Iron and steel	cold rolled	70	LW	0.09	9
Iron and steel	cold rolled	70	SW	0.20	9
Iron and steel	covered with red rust	20	T	0.61–0.85	1
Iron and steel	electrolytic	22	T	0.05	4
Iron and steel	electrolytic	100	T	0.05	4
Iron and steel	electrolytic	260	T	0.07	4
Iron and steel	electrolytic, carefully polished	175–225	T	0.05–0.06	1
Iron and steel	freshly worked with emery	20	T	0.24	1
Iron and steel	ground sheet	950–1100	T	0.55–0.61	1
Iron and steel	heavily rusted sheet	20	T	0.69	2
Iron and steel	hot rolled	20	T	0.77	1
Iron and steel	hot rolled	130	T	0.60	1
Iron and steel	oxidized	100	T	0.74	1
Iron and steel	oxidized	100	T	0.74	4
Iron and steel	oxidized	125–525	T	0.78–0.82	1
Iron and steel	oxidized	200	T	0.79	2
Iron and steel	oxidized	1227	T	0.89	4
Iron and steel	oxidized	200–600	T	0.80	1
Iron and steel	oxidized strongly	50	T	0.88	1
Iron and steel	oxidized strongly	500	T	0.98	1
Iron and steel	polished	100	T	0.07	2

1	2	3	4	5	6
Iron and steel	polished	400–1000	T	0.14–0.38	1
Iron and steel	polished sheet	750–1050	T	0.52–0.56	1
Iron and steel	rolled, freshly	20	T	0.24	1
Iron and steel	rolled sheet	50	T	0.56	1
Iron and steel	rough, plane surface	50	T	0.95–0.98	1
Iron and steel	rusted, heavily	17	SW	0.96	5
Iron and steel	rusted red, sheet	22	T	0.69	4
Iron and steel	rusty, red	20	T	0.69	1
Iron and steel	shiny, etched	150	T	0.16	1
Iron and steel	shiny oxide layer, sheet,	20	T	0.82	1
Iron and steel	wrought, carefully polished	40–250	T	0.28	1
Iron galvanized	heavily oxidized	70	LW	0.85	9
Iron galvanized	heavily oxidized	70	SW	0.64	9
Iron galvanized	sheet	92	T	0.07	4
Iron galvanized	sheet, burnished	30	T	0.23	1
Iron galvanized	sheet, oxidized	20	T	0.28	1
Iron tinned	sheet	24	T	0.064	4
Lacquer	3 colors sprayed on Aluminum	70	LW	0.92–0.94	9
Lacquer	3 colors sprayed on Aluminum	70	SW	0.50–0.53	9
Lacquer	Aluminum on rough surface	20	T	0.4	1
Lacquer	bakelite	80	T	0.83	1
Lacquer	black, dull	40–100	T	0.96–0.98	1
Lacquer	black, matte	100	T	0.97	2
Lacquer	black, shiny, sprayed on iron	20	T	0.87	1

1	2	3	4	5	6
Lacquer	heat-resistant	100	T	0.92	1
Lacquer	white	40–100	T	0.8–0.95	1
Lacquer	white	100	T	0.92	2
Lead	oxidized, gray	20	T	0.28	1
Lead	oxidized, gray	22	T	0.28	4
Lead	oxidized at 200°C	200	T	0.63	1
Lead	shiny	250	T	0.08	1
Lead	unoxidized, polished	100	T	0.05	4
Lead red		100	T	0.93	4
Lead red, powder		100	T	0.93	1
Leather	tanned		T	0.75–0.80	1
Lime			T	0.3–0.4	1
Magnesium		22	T	0.07	4
Magnesium		260	T	0.13	4
Magnesium		538	T	0.18	4
Magnesium	polished	20	T	0.07	2
Magnesium powder			T	0.86	1
Molybdenum		600–1000	T	0.08–0.13	1
Molybdenum		1500–2200	T	0.19–0.26	1
Molybdenum	filament	700–2500	T	0.1–0.3	1
Mortar		17	SW	0.87	5
Mortar	dry	36	SW	0.94	7
Nichrome	rolled	700	T	0.25	1
Nichrome	sandblasted	700	T	0.70	1
Nichrome	wire, clean	50	T	0.65	1
Nichrome	wire, clean	500–1000	T	0.71–0.79	1
Nichrome	wire, oxidized	50–500	T	0.95–0.98	1

1	2	3	4	5	6
Nickel	bright matte	122	T	0.041	4
Nickel	commercially pure, polished	100	T	0.045	1
Nickel	commercially pure, polished	200–400	T	0.07–0.09	1
Nickel	electrolytic	22	T	0.04	4
Nickel	electrolytic	38	T	0.06	4
Nickel	electrolytic	260	T	0.07	4
Nickel	electrolytic	538	T	0.10	4
Nickel	electroplated, polished	20	T	0.05	2
Nickel	electroplated on iron, polished	22	T	0.045	4
Nickel	electroplated on iron, unpolished	20	T	0.11–0.40	1
Nickel	electroplated on iron, unpolished	22	T	0.11	4
Nickel	oxidized	200	T	0.37	2
Nickel	oxidized	227	T	0.37	4
Nickel	oxidized	1227	T	0.85	4
Nickel	oxidized at 600°C	200–600	T	0.37–0.48	1
Nickel	polished	122	T	0.045	4
Nickel	wire	200–1000	T	0.1–0.2	1
Nickel oxide		500–650	T	0.52–0.59	1
Nickel oxide		1000–1250	T	0.75–0.86	1
Oil, lubricating	0.025 mm film	20	T	0.27	2
Oil, lubricating	0.050 mm film	20	T	0.46	2
Oil, lubricating	0.125 mm film	20	T	0.72	2
Oil, lubricating	film on Ni base: Ni base only	20	T	0.05	2
Oil, lubricating	thick coating	20	T	0.82	2

1	2	3	4	5	6
Paint	8 different colors and qualities	70	LW	0.92–0.94	9
Paint	8 different colors and qualities	70	SW	0.88–0.96	9
Paint	Aluminum, various ages	50–100	T	0.27–0.67	1
Paint	cadmium yellow		T	0.28–0.33	1
Paint	chrome green		T	0.65–0.70	1
Paint	cobalt blue		T	0.7–0.8	1
Paint	oil	17	SW	0.87	5
Paint	oil, black flat	20	SW	0.94	6
Paint	oil, black gloss	20	SW	0.92	6
Paint	oil, gray flat	20	SW	0.97	6
Paint	oil, gray gloss	20	SW	0.96	6
Paint	oil, various colors	100	T	0.92–0.96	1
Paint	oil based, average of 16 colors	100	T	0.94	2
Paint	plastic, black	20	SW	0.95	6
Paint	plastic, white	20	SW	0.84	6
Paper	4 different colors	70	LW	0.92–0.94	9
Paper	4 different colors	70	SW	0.68–0.74	9
Paper	black		T	0.90	1
Paper	black, dull		T	0.94	1
Paper	black, dull	70	LW	0.89	9
Paper	black, dull	70	SW	0.86	9
Paper	blue, dark		T	0.84	1
Paper	coated with black lacquer		T	0.93	1
Paper	green		T	0.85	1
Paper	red		T	0.76	1
Paper	white	20	T	0.7–0.9	1

1	2	3	4	5	6
Paper	white, 3 different glosses	70	LW	0.88–0.90	9
Paper	white, 3 different glosses	70	SW	0.76–0.78	9
Paper	white bond	20	T	0.93	2
Paper	yellow		T	0.72	1
Plaster		17	SW	0.86	5
Plaster	plasterboard, untreated	20	SW	0.90	6
Plaster	rough coat	20	T	0.91	2
Plastic	glass fibre laminate (printed circ. board)	70	LW	0.91	9
Plastic	glass fibre laminate (printed circ. board)	70	SW	0.94	9
Plastic	polyurethane isolation board	70	LW	0.55	9
Plastic	polyurethane isolation board	70	SW	0.29	9
Plastic	PVC, plastic floor, dull, structured	70	LW	0.93	9
Plastic	PVC, plastic floor, dull, structured	70	SW	0.94	9
Platinum		17	T	0.016	4
Platinum		22	T	0.03	4
Platinum		100	T	0.05	4
Platinum		260	T	0.06	4
Platinum		538	T	0.10	4
Platinum		1000–1500	T	0.14–0.18	1
Platinum		1094	T	0.18	4
Platinum	pure, polished	200–600	T	0.05–0.10	1
Platinum	ribbon	900–1100	T	0.12–0.17	1

1	2	3	4	5	6
Platinum	wire	50–200	T	0.06–0.07	1
Platinum	wire	500–1000	T	0.10–0.16	1
Platinum	wire	1400	T	0.18	1
Porcelain	glazed	20	T	0.92	1
Porcelain	white, shiny		T	0.70–0.75	1
Rubber	hard	20	T	0.95	1
Rubber	soft, gray, rough	20	T	0.95	1
Sand			T	0.60	1
Sand		20	T	0.90	2
Sandstone	polished	19	LLW	0.909	8
Sandstone	rough	19	LLW	0.935	8
Silver	polished	100	T	0.03	2
Silver	pure, polished	200–600	T	0.02–0.03	1
Skin	human	32	T	0.98	2
Slag	boiler	0–100	T	0.97–0.93	1
Slag	boiler	200–500	T	0.89–0.78	1
Slag	boiler	600–1200	T	0.76–0.70	1
Slag	boiler	1400–1800	T	0.69–0.67	1
Snow: See Water					
Soil	dry	20	T	0.92	2
Soil	saturated with water	20	T	0.95	2
Stainless steel	alloy, 8% Ni, 18% Cr	500	T	0.35	1
Stainless steel	rolled	700	T	0.45	1
Stainless steel	sandblasted	700	T	0.70	1
Stainless steel	sheet, polished	70	LW	0.14	9
Stainless steel	sheet, polished	70	SW	0.18	9

1	2	3	4	5	6
Stainless steel	sheet, untreated, somewhat scratched	70	LW	0.28	9
Stainless steel	sheet, untreated, somewhat scratched	70	SW	0.30	9
Stainless steel	type 18-8, buffed	20	T	0.16	2
Stainless steel	type 18-8, oxidized at 800°C	60	T	0.85	2
Stucco	rough, lime	10–90	T	0.91	1
Styrofoam	insulation	37	SW	0.60	7
Tar			T	0.79–0.84	1
Tar	paper	20	T	0.91–0.93	1
Tile	glazed	17	SW	0.94	5
Tin	burnished	20–50	T	0.04–0.06	1
Tin	tin-plated sheet iron	100	T	0.07	2
Titanium	oxidized at 540°C	200	T	0.40	1
Titanium	oxidized at 540°C	500	T	0.50	1
Titanium	oxidized at 540°C	1000	T	0.60	1
Titanium	polished	200	T	0.15	1
Titanium	polished	500	T	0.20	1
Titanium	polished	1000	T	0.36	1
Tungsten		200	T	0.05	1
Tungsten		600–1000	T	0.1–0.16	1
Tungsten		1500–2200	T	0.24–0.31	1
Tungsten	filament	3300	T	0.39	1
Varnish	flat	20	SW	0.93	6
Varnish	on oak parquet floor	70	LW	0.90–0.93	9
Varnish	on oak parquet floor	70	SW	0.90	9

1	2	3	4	5	6
Wallpaper	slight pattern, light gray	20	SW	0.85	6
Wallpaper	slight pattern, red	20	SW	0.90	6
Water	distilled	20	T	0.96	2
Water	frost crystals	–10	T	0.98	2
Water	ice, covered with heavy frost	0	T	0.98	1
Water	ice, smooth	–10	T	0.96	2
Water	ice, smooth	0	T	0.97	1
Water	layer >0.1 mm thick	0–100	T	0.95–0.98	1
Water	snow		T	0.8	1
Water	snow	–10	T	0.85	2
Wood		17	SW	0.98	5
Wood		19	LLW	0.962	8
Wood	ground		T	0.5–0.7	1
Wood	pine, 4 different samples	70	LW	0.81–0.89	9
Wood	pine, 4 different samples	70	SW	0.67–0.75	9
Wood	planed	20	T	0.8–0.9	1
Wood	planed oak	20	T	0.90	2
Wood	planed oak	70	LW	0.88	9
Wood	planed oak	70	SW	0.77	9
Wood	plywood, smooth, dry	36	SW	0.82	7
Wood	plywood, untreated	20	SW	0.83	6
Wood	white, damp	20	T	0.7–0.8	1
Zinc	oxidized at 400°C	400	T	0.11	1
Zinc	oxidized surface	1000–1200	T	0.50–0.60	1

21 – Emissivity tables

1	2	3	4	5	6
Zinc	polished	200–300	T	0.04–0.05	1
Zinc	sheet	50	T	0.20	1

22 Glossary

Term or expression	Explanation
absorption (absorption factor)	The amount of radiation absorbed by an object relative to the received radiation. A number between 0 and 1.
ambient	Objects and gases that emit radiation towards the object being measured.
atmosphere	The gases between the object being measured and the camera, normally air.
autoadjust	A function making a camera perform an internal image correction.
autopalette	The IR image is shown with an uneven spread of colors, displaying cold objects as well as hot ones at the same time.
blackbody	Totally non-reflective object. All its radiation is due to its own temperature.
blackbody radiator	An IR radiating equipment with blackbody properties used to calibrate IR cameras.
calculated atmospheric transmission	A transmission value computed from the temperature, the relative humidity of air and the distance to the object.
cavity radiator	A bottle shaped radiator with an absorbing inside, viewed through the bottleneck.
color temperature	The temperature for which the color of a blackbody matches a specific color.
conduction	The process that makes heat spread into a material.
continuous adjust	A function that adjusts the image. The function works all the time, continuously adjusting brightness and contrast according to the image content.
convection	The process that makes hot air or liquid rise.
difference temperature	A value which is the result of a subtraction between two temperature values.
dual isotherm	An isotherm with two color bands, instead of one.
emissivity (emissivity factor)	The amount of radiation coming from an object, compared to that of a blackbody. A number between 0 and 1.
emittance	Amount of energy emitted from an object per unit of time and area (W/m^2)

Term or expression	Explanation
estimated atmospheric transmission	A transmission value, supplied by a user, replacing a calculated one
external optics	Extra lenses, filters, heat shields etc. that can be put between the camera and the object being measured.
filter	A material transparent only to some of the infrared wavelengths.
FOV	Field of view: The horizontal angle that can be viewed through an IR lens.
FPA	Focal plane array: A type of IR detector.
graybody	An object that emits a fixed fraction of the amount of energy of a blackbody for each wavelength.
IFOV	Instantaneous field of view: A measure of the geometrical resolution of an IR camera.
image correction (internal or external)	A way of compensating for sensitivity differences in various parts of live images and also of stabilizing the camera.
infrared	Non-visible radiation, having a wavelength from about 2–13 μm .
IR	infrared
isotherm	A function highlighting those parts of an image that fall above, below or between one or more temperature intervals.
isothermal cavity	A bottle-shaped radiator with a uniform temperature viewed through the bottleneck.
Laser LocatIR	An electrically powered light source on the camera that emits laser radiation in a thin, concentrated beam to point at certain parts of the object in front of the camera.
laser pointer	An electrically powered light source on the camera that emits laser radiation in a thin, concentrated beam to point at certain parts of the object in front of the camera.
level	The center value of the temperature scale, usually expressed as a signal value.
manual adjust	A way to adjust the image by manually changing certain parameters.
NETD	Noise equivalent temperature difference. A measure of the image noise level of an IR camera.
noise	Undesired small disturbance in the infrared image
object parameters	A set of values describing the circumstances under which the measurement of an object was made, and the object itself (such as emissivity, ambient temperature, distance etc.)

Term or expression	Explanation
object signal	A non-calibrated value related to the amount of radiation received by the camera from the object.
palette	The set of colors used to display an IR image.
pixel	Stands for <i>picture element</i> . One single spot in an image.
radiance	Amount of energy emitted from an object per unit of time, area and angle ($\text{W}/\text{m}^2/\text{sr}$)
radiant power	Amount of energy emitted from an object per unit of time (W)
radiation	The process by which electromagnetic energy, is emitted by an object or a gas.
radiator	A piece of IR radiating equipment.
range	The current overall temperature measurement limitation of an IR camera. Cameras can have several ranges. Expressed as two blackbody temperatures that limit the current calibration.
reference temperature	A temperature which the ordinary measured values can be compared with.
reflection	The amount of radiation reflected by an object relative to the received radiation. A number between 0 and 1.
relative humidity	Percentage of water in the air, relative to what is physically possible. Air temperature dependent.
saturation color	The areas that contain temperatures outside the present level/span settings are colored with the saturation colors. The saturation colors contain an 'overflow' color and an 'underflow' color. There is also a third red saturation color that marks everything saturated by the detector indicating that the range should probably be changed.
span	The interval of the temperature scale, usually expressed as a signal value.
spectral (radiant) emittance	Amount of energy emitted from an object per unit of time, area and wavelength ($\text{W}/\text{m}^2/\mu\text{m}$)
temperature range	The current overall temperature measurement limitation of an IR camera. Cameras can have several ranges. Expressed as two blackbody temperatures that limit the current calibration.
temperature scale	The way in which an IR image currently is displayed. Expressed as two temperature values limiting the colors.
thermogram	infrared image

Term or expression	Explanation
transmission (or transmittance) factor	Gases and materials can be more or less transparent. Transmission is the amount of IR radiation passing through them. A number between 0 and 1.
transparent isotherm	An isotherm showing a linear spread of colors, instead of covering the highlighted parts of the image.
visual	Refers to the video mode of a IR camera, as opposed to the normal, thermographic mode. When a camera is in video mode it captures ordinary video images, while thermographic images are captured when the camera is in IR mode.

Index

*.img: 121
 *.jpg: 121
 *.seq files
 converting: 81
 *.tgw: 121
 *.tif
 8/12-bit: 121
 8-bit: 121
 12-bit: 121
 *.tlw: 121
 *.tmw: 121

3

3D View: 101, 102, 105, 106, 110, 112

A

about FLIR Systems: 123
Add: 92
Add a result table: 86
 Adobe® PDF document, creating: 25, 85
Advanced: 89
 alarm
 inserting: 27
All: 112
 altitude: 32, 33, 34
 arrow
 creating: 26
 inserting: 26
Atmospheric Temperature: 91, 93
Auto: 102, 106, 107
Auto-adjust: 95
Axes: 103, 108, 115

B

back cover
 creating: 47
Background: 103, 108, 115
Backward: 113
Band: 106
 bands
 extreme infrared: 137
 far infrared: 137
 middle infrared: 137
 near infrared: 137
Bar color: 108
 bent line
 cloning: 61
 creating: 26

bent line (*continued*)
 deleting: 62
 inserting: 26
 moving: 58
 selecting: 59
blackbody: 73
 construction: 138
 explanation: 138
 practical application: 138
box
 cloning: 61
 creating: 26
 deleting: 62
 inserting: 26
 moving: 58
 selecting: 59
Browse: 89

C

cavity radiator
 applications: 138
 explanation: 138
 changing
 emissivity: 73
 chart datum: 32, 33, 34
Check for updates: 85
 circle
 cloning: 61
 creating: 26
 deleting: 62
 inserting: 26
 moving: 58
 selecting: 59
 cloning
 bent line: 61
 box: 61
 circle: 61
 flying spotmeter: 61
 line: 61
 measurement tools: 61
 polygon area: 61
Cold Spot: 97
Color: 103, 108, 115
Colors: 89
Columns: 102, 106
Computed transmission: 94
Connect: 84, 111
 connecting
 infrared object: 25, 84

connecting (*continued*)
 infrared objects: 56
Contents: 86, 118, 119, 120
Contrast: 90
 conventions
 typographical
 italic: 1
 monospace: 1
 semibold: 1
 UPPERCASE: 1
 converting *.seq files: 81
 copyright: viii
 courses: 1
Create AVI File: 85
Create PDF Document: 85
 creating
 Adobe® PDF document: 25, 85
 alarm: 27
 arrow: 26
 back cover: 47
 bent line: 26
 box: 26
 circle: 26
 custom report template: 45, 46, 48
 difference calculation: 26
 document properties: 68
 emissivity table file: 73
 flying spotmeter: 26
 formula: 75
 front cover: 47
 isotherm: 27
 line: 26
 marker: 26
 polygon area: 26
 report
 using QuickInsert: 21
 using Rapid Report Manager: 22
 using Windows® Explorer: 23
 using Wizard: 16
 report template: 45, 46, 48
 spotmeter: 26
 text comment file: 71
Cursor: 97
Custom: 99
 customer support: 3
 custom report template, creating: 45, 46, 48

D

Delete: 84, 90, 92, 96, 97

Delete Page: 84

deleting

 bent line: 62
 box: 62

deleting (*continued*)

 circle: 62
 Field object: 66
 flying spotmeter: 62
 infrared object: 25, 84
 infrared objects: 63
 line: 62
 measurement tools: 62
 page: 25, 84
 polygon area: 62
 Result Table object: 64
 Summary Table object: 65

design mode: 25

Dewar, James: 136

difference calculation

 creating: 26
 inserting: 26

Digital Photo: 84

Digital Photo object

 description: 40
 inserting: 24, 49, 84

Display equation on chart: 113

Display R-squared value on chart: 114

distance

 explanation: 131

Distance to object: 93, 99

document properties

 creating: 68
 custom: 68
 summary: 68

Duplicate Page: 84

duplicating page: 25, 84

E

Edit: 92

education: 1

electromagnetic spectrum: 137

emissivity

 changing: 73
 data: 153
 definition: 73
 explanation: 127
 tables: 153

Emissivity: 93, 99

emissivity table file

 creating: 73

Exponential: 113

extreme infrared band: 137

F

far infrared band: 137

Field object

 deleting: 66

Field object (*continued*)

description: 42
inserting: 25, 55, 84

file formats

*.img: 121
*.jpg: 121
*.tgw: 121
*.tlw: 121
*.tmw: 121
8/12-bit *.tif: 121
8-bit *.tif: 121
12-bit *.tif: 121

files

indexing: 13
searching for: 13

Fixed: 102, 107**Fixed transmission:** 94**FLIR Reporter Professional**

starting
 using command: 83
 using context-sensitive menus: 83
 using toolbar button: 83

FLIR Systems

copyright: viii
history: 123
ISO 9001: viii
legal disclaimer: viii
patents: viii
patents pending: viii
product warranty: viii
quality assurance: viii
quality management system: viii
trademarks: viii
warranty: viii

flying spotmeter

cloning: 61
creating: 26
deleting: 62
inserting: 26
moving: 58
selecting: 59

Font size: 98**formats**

*.img: 121
*.jpg: 121
*.tgw: 121
*.tlw: 121
*.tmw: 121
8/12-bit *.tif: 121
8-bit *.tif: 121
12-bit *.tif: 121

formula, creating: 75**formulas**

Planck's law: 139
Stefan Boltzmann's formula: 142
Wien's displacement law: 140

Formulas: 97**forums:** 1**Forward:** 113**front cover**

creating: 47

fusion, image: 32, 33, 87**G****General:** 98, 102, 106, 112**glossary:** 172**GPS:** 32, 33, 34**graybody:** 144**Grid:** 103, 115**Grid Lines:** 101, 102, 105, 106, 110, 112**Gustav Robert Kirchhoff:** 138**H****hardware requirements**

PC: 5

heat picture: 135**Height:** 100**Help:** 85**help, displaying:** 25, 85**Herschel, William:** 133**histogram**

description: 36
inserting: 24, 50, 84

Histogram equalization: 89**history**

FLIR Systems: 123
infrared technology: 133

Hot Spot: 97**humidity alarm**

inserting: 27

Humidity Alarm Level: 91**I****Image:** 97**Image Description:** 92**image fusion:** 32, 33, 87**Image Fusion:** 87**images**

searching for: 13

Image sequence number: 111**img:** 121**indexing files:** 13**Indoor air temperature:** 90

infrared object
 deleting: 25, 84
 infrared objects
 connecting: 25, 56, 84
 deleting: 63
 resizing: 57
 infrared semi-transparent body: 145
 infrared technology
 history: 133
Insert Field: 84
 inserting
 alarm: 27
 arrow: 26
 bent line: 26
 box: 26
 circle: 26
 difference calculation: 26
 Digital Photo object: 24, 49, 84
 Field object: 25, 55, 84
 flying spotmeter: 26
 IR Histogram object: 24, 50, 84
 IR Profile object: 24, 51, 84
 IR Trending object: 24, 52, 84
 IR Viewer object: 24, 49, 84
 isotherm: 27
 line: 26
 marker: 26
 polygon area: 26
 Result Table object: 24, 53, 84
 spotmeter: 26
 Summary Table object: 25, 54, 84
Insert Summary Table: 84
Insert Table: 84
 installation: 6
 insulation alarm
 inserting: 27
Insulation factor: 91
Invert palette: 89
IR Histogram: 84
 IR Histogram object
 description: 36
 inserting: 24, 50, 84
 toolbar: 29
IR Profile: 84
 IR Profile object
 description: 35
 inserting: 24, 51, 84
 toolbar: 28
IR Scale: 102, 106
IR Trending: 84
 IR Trending object
 description: 38
 inserting: 24, 52, 84

IR Trending object (*continued*)
 toolbar: 30
IR Viewer: 84
 IR Viewer object
 description: 32
 inserting: 24, 49, 84
 toolbar: 26
 ISO 9001: viii
 isotherm
 creating: 27
 inserting: 27
Isotherm: 96
Isotherms: 90
italic: 1
Items: 112

J

James Dewar: 136
 Josef Stefan: 142
 jpg: 121

K

Kirchhoff, Gustav Robert: 138

L

Label: 92, 98
 Landriani, Marsilio: 133
 Langley, Samuel P.: 136
 latitude: 32, 33, 34
 laws
 Planck's law: 139
 Stefan-Boltzmann's formula: 142
 Wien's displacement law: 140
 legal disclaimer: viii
Legend: 101, 102, 105, 106, 110, 112
 Leopoldo Nobili: 135
 license information: 1
 license number: 6, 7
Limit: 108
 line
 cloning: 61
 creating: 26
 deleting: 62
 inserting: 26
 moving: 58
 selecting: 59
Line: 116
Linear: 113
Lines: 104, 109
 linking
 Microsoft® Word field: 70
 text comment: 72

Logarithmic: 113
longitude: 32, 33, 34
Ludwig Boltzmann: 142

M

Macedonio Melloni: 134
main toolbar: 24
map: 32, 33, 34
marker
 creating: 26
 inserting: 26
Marsilio Landriani: 133
Max. Temperature: 89, 90, 95, 102, 107
Max Planck: 139
Measurement: 88
measurement formula: 147
measurement situation
 general thermographic: 147
Measurement symbol: 98
measurement tools
 cloning: 61
 deleting: 62
 moving: 58
 moving between: 60
 selecting: 59
Melloni, Macedonio: 134
Microsoft® Word field
 linking: 70
middle infrared band: 137
Min. Temperature: 89, 90, 95, 102, 107
monospace: 1
moving
 bent line: 58
 between measurement tools: 60
 box: 58
 circle: 58
 flying spotmeter: 58
 line: 58
 measurement tools: 58
 polygon area: 58
Moving average: 113

N

Name: 86
near infrared band: 137
Nobili, Leopoldo : 135
non-blackbody emitters: 143
None: 106, 113
Number of columns: 86
Number of rows: 86

O

Object Parameters: 93, 99
objects
 Digital Photo object: 40
 Field object: 42
 IR Histogram object: 36
 IR Profile object: 35
 IR Trending object: 38
 IR Viewer object: 32
 Result Table object: 41
 Summary Table object: 43
Object signal: 95
Open: 87, 117
Open Photo: 88
Open Reporter 8 manual: 85
Outdoor air temperature: 90

P

page
 deleting: 25, 84
 duplicating: 25, 84
Palette: 90, 96
patents: viii
patents pending: viii
PDF document, creating: 25, 85
Percentage axis: 107
photo
 description: 40
 inserting: 24, 49, 84
Picture in Picture (PiP): 87
Planck, Max: 139
Plot Area: 103, 108, 115
polygon area
 cloning: 61
 creating: 26
 deleting: 62
 inserting: 26
 moving: 58
 selecting: 59
Polynomial: 113
Power: 113
Pre-defined measurement symbols and isotherms: 95
Pre-defined object parameters: 95
Pre-defined palette and color distribution: 95
Prediction: 113
Preferences: 95
product warranty: viii
profile
 description: 35
 inserting: 24, 51, 84

Q

quality assurance: viii
 quality management system: viii
QuickInsert: 84

R

radiation power terms
 emission from atmosphere: 148
 emission from object: 148
 reflected emission from ambient source: 148
 radiation sources
 relative magnitudes: 151, 152
 radiators
 cavity radiator: 138
 graybody radiators: 144
 selective radiators: 144
 radiometric sequence files
 converting: 81
Rapid Report Manager, using: 22
Ref#1: 87
Ref#2: 87
Ref#3: 87
 reflected apparent temperature
 explanation: 131
Reflected apparent temperature: 93, 99
Refresh: 110, 118, 119, 120
Relative air humidity: 91
 relative humidity
 explanation: 131
Relative humidity: 93
 relative magnitudes
 radiation sources: 151, 152
 releases, service: 1
 report, creating
 using **QuickInsert**: 21
 using **Rapid Report Manager**: 22
 using Windows® Explorer: 23
 using Wizard: 16
 report template
 creating: 45, 46, 48
 requirements
 hardware
 PC: 5
 resizing
 infrared objects: 57
 result table
 description: 41
 Result Table object
 deleting: 64
 description: 41
 inserting: 24, 53, 84
Rotate: 100
Rotate Left: 88

Rotate Right: 88

S

Samuel P. Langley: 136
Save As: 87
Scale limits from image: 95
 screen elements
 Digital Photo object: 40
 Field object: 42
 IR Histogram object: 36
 IR Histogram object toolbar: 29
 IR Profile object: 35
 IR Profile object toolbar: 28
 IR Trending object: 38
 IR Trending object toolbar: 30
 IR Viewer object: 32
 IR Viewer object toolbar: 26
 main toolbar: 24
 Result Table object: 41
 Summary Table object: 43
 security device: 6, 7
 selecting
 bent line: 59
 box: 59
 circle: 59
 flying spotmeter: 59
 line: 59
 measurement tools: 59
 polygon area: 59
Select Language: 85
Select Units: 85
semibold: 1
 semi-transparent body: 145
 sequence files
 converting: 81
 serial number: 6, 7
 service releases: 1
Set as default: 98, 99
 setting
 emissivity: 73
Settings: 87, 89, 90, 92, 93, 95, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 108, 109, 110, 111, 112, 113, 115, 116
Show IR Scale: 87
Show label: 98
Show Only Visible Plot Lines in Legend: 110, 112
Show Only Visible Profile Lines in Legend: 101, 102
Show out of range colors: 89
Show saturation colors: 89
Show value: 98
Signal linear: 89

Sir James Dewar: 136
 Sir William Herschel: 133
Size: 86
Size/Position: 100
Sketch: 92
 software updates: 1
Solid: 90
 spectrum
 thermometrical: 134
 spotmeter
 cloning: 61
 creating: 26
 deleting: 62
 inserting: 26
 moving: 58
 selecting: 59
 starting
 FLIR Reporter Professional: 83
 starting Wizard: 16
 Stefan, Josef: 142
Step: 106
 Summary Table object
 deleting: 65
 description: 43
 inserting: 25, 54, 84
 support, technical: 3
Swap X & Y Axes: 101, 102, 105, 106, 110, 112
 system requirements
 hardware: 5

T

task pane: 14
 displaying: 25
 technical support: 3
 temperature
 reflected apparent: 131
Temperature: 93, 95
Text: 98, 103, 108, 115
Text background: 98
 text comment
 linking: 72
Text Comment: 111
Text Comment Editor: 85
 text comment file
 creating: 71
Text Comments: 92
 tgw: 121
 theory of thermography: 137
 thermograph: 135
 thermographic measurement techniques
 introduction: 127
 thermographic theory: 137
 thermometrical spectrum: 134

thermos flask: 136
Threshold: 88, 102, 108, 112
 tif: 121
Time: 111
 tlw: 121
 tmw: 121
 toolbars
 IR Histogram object toolbar: 29
 IR Profile object toolbar: 28
 IR Trending object toolbar: 30
 IR Viewer object toolbar: 26
 main toolbar: 24
 trademarks: viii
 training: 1
Transmission: 93
 trending
 description: 38
 inserting: 24, 52, 84
 typographical conventions
 italic: 1
 monospace: 1
 semibold: 1
 UPPERCASE: 1

U

uninstallation: 9
 updates
 software: 1
 UPPERCASE: 1
Use bilinear filtering to enhance image quality: 89
Use palette: 106
 user-to-user forums: 1

V

Value: 92, 94
 viewer
 description: 32
 inserting: 24, 49, 84
View Full Image: 87
Visual image in black and white: 88

W

warranty: viii
Width: 100
 Wien, Wilhelm: 140
 Wilhelm Wien: 140
 William Herschel: 133
 Wizard, starting: 16

Y

Y Axis: 111

Z

Zoom: 87

zooming: 27

A note on the technical production of this manual

This manual was produced using XML—the *eXtensible Markup Language*. For more information about XML, please visit <http://www.w3.org/XML/>

A note on the typeface used in this manual

This manual was typeset using Swiss 721, which is Bitstream's pan-European version of the Helvetica™ typeface. Helvetica™ was designed by Max Miedinger (1910–1980).

The following file identities and file versions were used in the formatting stream output for this manual:

20235103.xml a23
20235203.xml a21
20235303.xml a16
20236703.xml a36
20237103.xml a9
20238703.xml b8
20250403.xml a16
20254903.xml a43
20257003.xml a29
20273903.xml a4
20277903.xml a7
20279903.xml a9
20280003.xml a4
20280103.xml a8
20280203.xml a6
20280303.xml a3
20280403.xml a2
20280503.xml a3
20280603.xml a6
20280703.xml a9
20280803.xml a3
20281203.xml a2
20281403.xml a6
20281503.xml a4
20287303.xml a4
R0100.rcp a17
config.xml a5

■ AUSTRALIA

FLIR Systems
10 Business Park Drive
Nottinghill
Victoria 3168
Australia
Tel: +61-3-9550-2800
Fax: +61-3-9558-9853
Email: info@flir.com.au
Web: www.flirthermography.com

■ BELGIUM

FLIR Systems
Uitbreidingstraat 60-62
B-2600 Berchem
BELGIUM
Phone: +32 (0)3 287 87 11
Fax: +32 (0)3 287 87 29
E-mail: info@flir.be
Web: www.flirthermography.com

■ BRAZIL

FLIR Systems
Av. Antonio Bardella, 320
CEP: 18085-852 Sorocaba
São Paulo
BRAZIL
Phone: +55 15 3238 8070
Fax: +55 15 3238 8071
E-mail: paul.vermennen@flir.com.br
E-mail: flir@flir.com.br
Web: www.flirthermography.com

■ CANADA

FLIR Systems
5230 South Service Road, Suite #125
Burlington, ON. L7L 5K2
CANADA
Phone: 1 800 613 0507 ext. 30
Fax: 905 639 5488
E-mail: IRCanada@flir.com
Web: www.flirthermography.com

■ CHINA

FLIR Systems
Beijing Representative Office
Rm 203A, Dongwai Diplomatic Office
Building
23 Dongzhimenwai Dajie
Beijing 100600
P.R.C.
Phone: +86 10 8532 2304
Fax: +86 10 8532 2460
E-mail: beijing@flir.com.cn
Web: www.flirthermography.com

■ CHINA

FLIR Systems
Shanghai Representative Office
Room 6311, West Building
Jin Jiang Hotel
59 Maoming Road (South)
Shanghai 200020
P.R.C.
Phone: +86 21 5466 0286
Fax: +86 21 5466 0289
E-mail: shanghai@flir.com.cn
Web: www.flirthermography.com

■ CHINA

FLIR Systems
Guangzhou Representative Office
1105 Main Tower, Guang Dong
International Hotel
339 Huanshi Dong Road
Guangzhou 510098
P.R.C.
Phone: +86 20 8333 7492
Fax: +86 20 8331 0976
E-mail: guangzhou@flir.com.cn
Web: www.flirthermography.com

■ FRANCE

FLIR Systems
10 rue Gynemer
92130 Issy les Moulineaux
Cedex
FRANCE
Phone: +33 (0)1 41 33 97 97
Fax: +33 (0)1 47 36 18 32
E-mail: info@flir.fr
Web: www.flirthermography.com

■ GERMANY

FLIR Systems
Bernier Strasse 81
D-60437 Frankfurt am Main
GERMANY
Phone: +49 (0)69 95 00 900
Fax: +49 (0)69 95 00 9040
E-mail: info@flir.de
Web: www.flirthermography.com

■ GREAT BRITAIN

FLIR Systems
2 Kings Hill Avenue - Kings Hill
West Malling
Kent, ME19 4AQ
UNITED KINGDOM
Phone: +44 (0)1732 220 011
Fax: +44 (0)1732 843 707
E-mail: sales@flir.uk.com
Web: www.flirthermography.com

■ HONG KONG

FLIR Systems
Room 1613-15, Tower 2
Grand Central Plaza
138 Shatin Rural Committee Rd
Shatin, N.T.
HONG KONG
Phone: +852 27 92 89 55
Fax: +852 27 92 89 52
E-mail: flir@flir.com.hk
Web: www.flirthermography.com

■ ITALY

FLIR Systems
Via L. Manara, 2
20051 Limbiate (MI)
ITALY
Phone: +39 02 99 45 10 51
Fax: +39 02 99 69 24 08
E-mail: info@flir.it
Web: www.flirthermography.com

■ JAPAN

FLIR SYSTEMS Japan KK
Nishi-Gotanda Access 8F
3-6-20 Nishi-Gotanda
Shinagawa-Ku
Tokyo 141-0031
JAPAN
Phone: +81 3 6277 5681
Fax: +81 3 6277 5682
E-mail: info@flir.jp
Web: www.flirthermography.com

■ SWEDEN

FLIR Systems
Worldwide Thermography Center
P.O. Box 3
SE-182 11 Danderyd
SWEDEN
Phone: +46 (0)8 753 25 00
Fax: +46 (0)8 753 23 64
E-mail: sales@flir.se
Web: www.flirthermography.com

■ USA

FLIR Systems
Corporate headquarters
27700A SW Parkway Avenue
Wilsonville, OR 97070
USA
Phone: +1 503 498 3547
Web: www.flirthermography.com

■ USA (Primary sales & service contact in USA)

FLIR Systems
USA Thermography Center
16 Esquire Road
North Billerica, MA. 01862
USA
Phone: +1 978 901 8000
Fax: +1 978 901 8887
E-mail: marketing@flir.com
Web: www.flirthermography.com

■ USA

FLIR Systems
Indigo Operations
70 Castilian Dr.
Goleta, CA 93117-3027
USA
Phone: +1 805 964 9797
Fax: +1 805 685 2711
E-mail: sales@indigosystems.com
Web: www.corebyindigo.com

■ USA

FLIR Systems
Indigo Operations
IAS Facility
701 John Sims Parkway East
Suite 2B
Niceville, FL 32578
USA
Phone: +1 850 678 4503
Fax: +1 850 678 4992
E-mail: sales@indigosystems.com
Web: www.corebyindigo.com